

UDMpm

Installation Guide

November 2021

Document Revision: 3.11.01

UDMpm

Release Date: November 2021

COPYRIGHT

© ACS Motion Control Ltd., 2022. All rights reserved.

Changes are periodically made to the information in this document. Changes are published as release notes and later incorporated into revisions of this document.

No part of this document may be reproduced in any form without prior written permission from ACS Motion Control.

TRADEMARKS

Windows and Intellisense are trademarks of Microsoft Corporation.

EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.

Any other companies and product names mentioned herein may be the trademarks of their respective owners.

PATENTS

Israel Patent No. 235022

US Patent Application No. 14/532,023

Europe Patent application No.15187586.1

Japan Patent Application No.: 2015-193179

Chinese Patent Application No.: 201510639732.X

Taiwan(R.O.C.) Patent Application No. 104132118

Korean Patent Application No. 10-2015-0137612

www.acsmotioncontrol.com

support@acsmotioncontrol.com

sales@acsmotioncontrol.com

NOTICE

The information in this document is deemed to be correct at the time of publishing. ACS Motion Control reserves the right to change specifications without notice. ACS Motion Control is not responsible for incidental, consequential, or special damages of any kind in connection with using this document.

Revision History

Date	Revision	Description
November 2021	3.11.01	New Version Release
October 2020	3.20	Corrections to table 5-2
September 2020	3.10	Corrections to table 4-2
December 2019	2.40	Rename to Installation Guide, front matter, RS232
January 2017	2.30	Rearranged document content for easier customer use Added package content and ordered part number sections Updated contents included in the SPii+CMntUDMpm-ACC1 mating connectors kit

		<p>Added pictures of all mating connectors and included manufacturer part numbers (when applicable)</p> <p>Updated minimum load inductance to 1mH</p> <p>Added note that PEG does not work with absolute encoder input</p> <p>For J3 connector pinout, removed digital input 8 on pin 19</p>
August 2016	2.25.30	<p>Updated absolute encoder bidirectional schematic diagram</p> <p>Updated absolute encoder hipurface schematic diagram</p> <p>Reformatted document using new template</p>
July 2016	2.25.20	Revised network update rate for 16 axes to 1 kHz
May 2016	2.25.10	<p>Added note concerning STO</p> <p>Document reformatted</p> <p>Eliminated non-relevant Related Documents</p>

Related Documentation

Documents listed in the following table provide additional information related to this document.

Authorized users can download the latest versions of the documents from [ACS Downloads](#).

Document	Description
<i>AN STO Safe Torque Off Function</i>	Provides the technical details for implementing the STO function for drives installed in ACS Motion Control systems.
<i>MC4U Product Guide</i>	Technical description of the MC4U Control Module integrated motion control product line.
<i>SPiiPlus MMI Application Studio User Guide</i>	Explains how to use the SPiiPlus MMI Application Studio and associated monitoring tools.
<i>HSSI Expansion Modules Hardware and Software Guide</i>	High-Speed Synchronous Serial Interface (HSSI) for expanded I/O, distributed axes, and nonstandard devices.

Document	Description
<i>SPIIPlus Setup Guide</i>	Provides guidance on how to configure and adjust the SPIIPlusNT systems to work with supported types of motors and feedback devices.
<i>AN PEG and MARK Operations</i>	Provides detailed description, specification and operation instructions for PEG capabilities
<i>SPIIPlus Command & Variable Reference Guide</i>	Describes all of the variables and commands available in the ACSPL+ programming language.
<i>SPIIPlus ACSPL+ Programmer's guide</i>	Provides practical instruction on how to use ACSPL+ to program your motion controller.

Conventions Used in this Guide

Text Formats

Format	Description
Bold	Names of GUI objects or commands
BOLD + UPPERCASE	ACSPL+ variables and commands
<code>Monospace + grey background</code>	Code example
<i>Italic</i>	Names of other documents
Blue	Hyperlink
[]	In commands indicates optional item(s)
	In commands indicates either/or items

Flagged Text






	Note - includes additional information or programming tips.
	Caution - describes a condition that may result in damage to equipment.
	Warning - describes a condition that may result in serious bodily injury or death.
	Model - highlights a specification, procedure, condition, or statement that depends on the product model
	Advanced - indicates a topic for advanced users.

Table of Contents

1. Introduction	12
1.1 Document scope	12
1.2 Product overview	12
2. Description	13
2.1 Connectors	13
2.1.1 DIP switch and jumper	14
2.2 Indicators	15
2.2.1 LED Indicators	15
2.3 Package content	16
2.4 Optional accessories	17
2.4.1 Ethernet cables	17
2.4.2 Mating connectors kit	17
2.4.3 J11 mating connector	18
2.4.4 STO Accessory Kit	18
2.5 Order part number	19
3. Mounting	22
4. Connections	23
4.1 Safety, EMC, and wiring guidelines	23
4.1.1 Electro-magnetic immunity and interference considerations	24
4.2 Connecting the UDMpm	25
4.3 Cooling	26
4.3.1 Horizontal installation with cooling fan	26
4.3.2 Vertical installation with cooling fan	26
4.4 Power supplies	27
4.4.1 J6 Control supply	27
4.4.1.1 Description	27
4.4.2 J10 Drive supply	28
4.4.2.1 Description	28
4.5 EtherCAT	29
4.5.1 J1 EtherCAT input connector	29
4.5.2 J2 EtherCAT output connector	31
4.6 I/O	32

4.6.1	J3 input / output connector	32
4.6.1.1	Connection schematics	35
4.6.1.2	Registration MARK Inputs	37
4.6.1.3	Position Event Generation (PEG)	38
4.6.2	J7 24V output supply connector	38
4.6.3	J11 general purpose connector	39
4.6.4	J12 HSSI connector	41
4.6.5	J13 RS232 Serial COM1 port connector (not used)	43
4.6.6	J14 Safe Torque Off (STO)	43
4.6.6.1	Description	43
4.6.6.2	Connection instructions	45
4.7	Encoder feedback	46
4.7.1	J4 , J5 encoder connectors	46
4.7.1.1	Absolute encoder interface	48
4.7.2	Connection schematics	49
4.7.3	Encoder types and assignment	52
4.7.3.1	Encoder configurations with resolver	53
4.7.3.2	Encoder configurations with no resolver	59
4.7.3.2.1	External encoder supply connection	64
4.8	Motors	64
4.8.1	J8, J9 motor connectors	64
4.8.2	Connection instructions	65
4.8.3	Motor filter	67
4.8.4	Mechanical motor braking	67
5.	Specifications	69
5.1	STO	74
5.2	Safety and faults	74
5.2.1	Fault indications	75
5.2.2	Emergency stop	75
5.2.3	Motor over temperature fault	75
5.2.4	Regeneration	76
5.3	Communication	76
5.3.1	Network (EtherCAT) communication	76
5.4	Dimensions	77

5.5 Weight	78
5.6 Compliance with standards	78
5.6.1 Environment	78
5.6.1.1 Thermal considerations	78

List Of Figures

Figure 2-1. Interface block diagram	12
Figure 3-1. Front view - connectors and DIP switch	13
Figure 3-2. Right side view - connectors and jumper	13
Figure 3-3. Left side view - STO connector	13
Figure 3-4. LED indicators	15
Figure 3-5. Drive supply indicator	15
Figure 3-6. EtherCAT indicators	15
Figure 3-7. Cable kit	18
Figure 3-8. STO-ACC1 accessory kit	19
Figure 3-9. Label with ordered P/N example	20
Figure 4-1. Retaining screw locations	22
Figure 4-2. Grounding screw	22
Figure 5-1. Grounding and shielding	23
Figure 5-2. Horizontal installation with cooling fan	26
Figure 5-3. Vertical installation with cooling fan	26
Figure 5-4. General purpose analog inputs	35
Figure 5-5. Limit connections	35
Figure 5-6. Emergency stop input	36
Figure 5-7. Digital input connections	36
Figure 5-8. Digital output connections	36
Figure 5-9. STO wiring scheme	45
Figure 5-10. STO implementation	46
Figure 5-11. Incremental digital AqB encoder connections	49
Figure 5-12. Hall sensors connection	50
Figure 5-13. Sin-Cos encoder connections	50
Figure 5-14. Absolute encoder hipurface schematic diagram	51
Figure 5-15. Absolute encoder schematic diagram	51
Figure 5-16. Absolute encoder bidirectional schematic diagram	52
Figure 5-17. External power connection	64
Figure 5-18. Three-phase motor connection	65
Figure 5-19. DC brush motor connection	66
Figure 5-20. Two-phase motor connection	66

Figure 5-21. Motor over temperature connection	67
Figure 5-22. Motor filter	67
Figure 5-23. Mechanical brake	68
Figure 6-1. Regeneration connection	76
Figure 6-2. EtherCAT network connections	77
Figure 6-3. UDMpm dimensions	77
Figure 6-4. Dissipated power vs current	79
Figure 6-5. Dissipated power vs temperature	80

List of Tables

Table 3-1. Connections	14
Table 3-2. DIP switch and jumper	14
Table 3-3. LED indicators	16
Table 3-4. Ethernet cables	17
Table 3-5. SPii+CMntUDMpm-ACC1 - Mating connectors kit contents	17
Table 3-6. STO-ACC1 Pinout	19
Table 3-7. Configuration as indicated by P/N	20
Table 3-8. P/N example	21
Table 5-1. J6 connector pinout	28
Table 5-2. J10 connector pinout	29
Table 5-3. J1 connector pinout	30
Table 5-4. J2 connector pinout	32
Table 5-5. J3 connector pinout	33
Table 5-6. Registration MARK sources per encoder	37
Table 5-7. J7 connector pinout	39
Table 5-8. J11 connector pinout	40
Table 5-9. J12 connection pinout	42
Table 5-10. J14 connection pinout	45
Table 5-11. J4, J5 connectors pinout	47
Table 5-12. Absolute encoder reference	48
Table 5-13. UDMpm encoder configuration with resolver	53
Table 5-14. UDMpmencoder configuration without resolver	59
Table 5-15. J8, J9 connector pinout	65
Table 6-1. Drive power specifications	72
Table 6-2. Input current vs. output power	73
Table 6-3. Power output vs current	73
Table 6-4. STO Specifications	74

1. Introduction

1.1 Document scope

This document describes the installation information for the UDMPM including electrical interfacing, device compatibility, mounting, and ventilation.

1.2 Product overview

The UDMPM is a dual and single axis, universal EtherCAT drive. The UDMPM is powered by a single phase 85 to 265Vac (or 120 to 375Vdc) and provides continuous/peak current options of 2.5A/5A, 5A/10A, and 7.5A/15A. The following figure shows the block diagram.

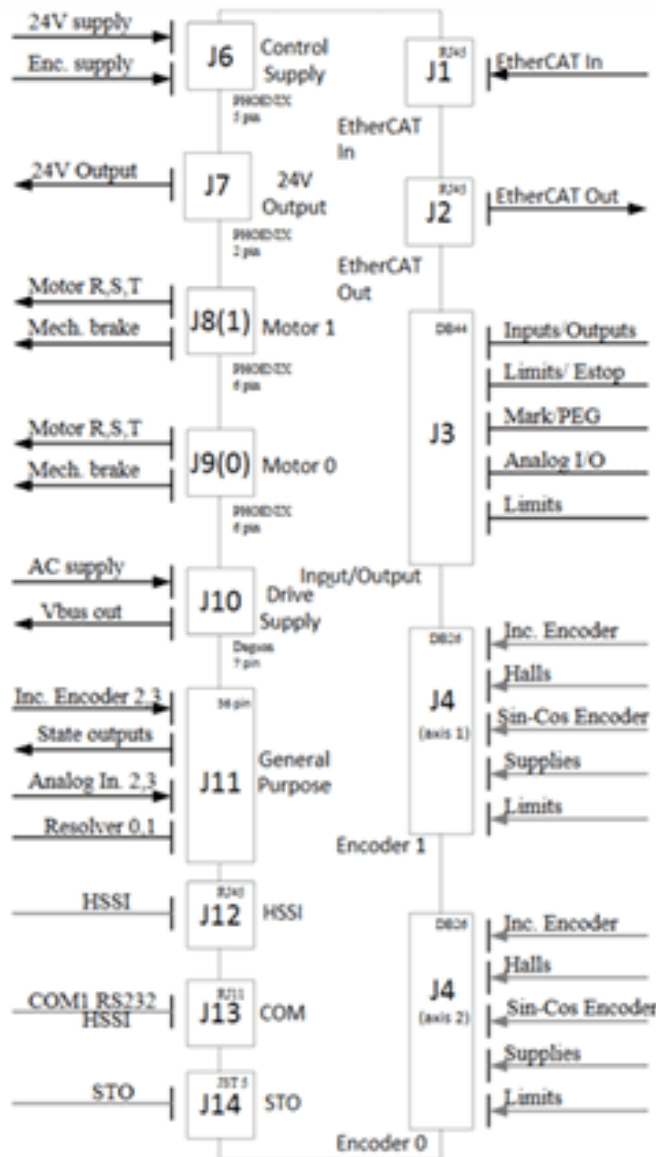


Figure 2-1. Interface block diagram

2. Description

2.1 Connectors

The following figures and table show and describe the UDMpm connectors, DIP switch, and jumper.

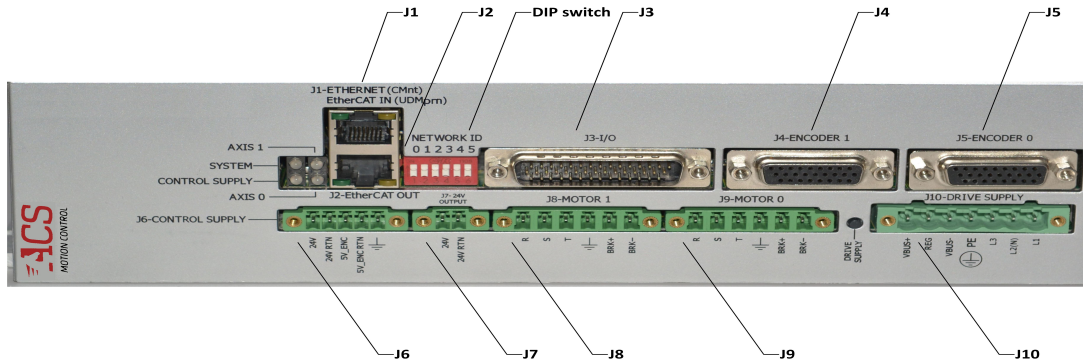


Figure 3-1. Front view - connectors and DIP switch

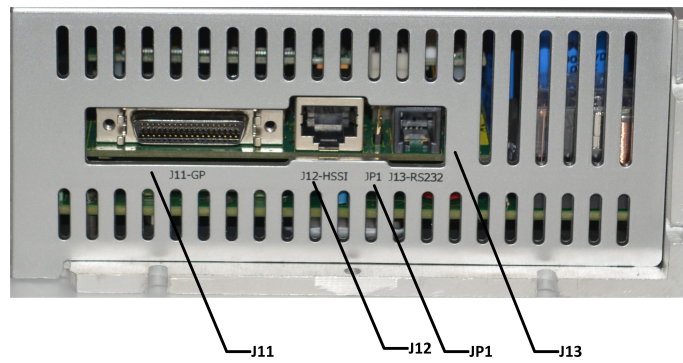


Figure 3-2. Right side view - connectors and jumper



Figure 3-3. Left side view - STO connector

Table 3-1. Connections

Connector assignment	Connector name	Description
J1	EtherCAT IN	
J2	EtherCAT OUT	
J3	I/O	
J4	Encoder 1	
J5	Encoder 0	
J6	Control supply	
J7	24V output	
J8	Motor 1	
J9	Motor 0	
J10	Drive supply	
J11	GP	
J12	HSSI	
J13	RS232	Not used
J14	STO	

2.1.1 DIP switch and jumper

The following table describes the UDMpm DIP switch and jumper.

Table 3-2. DIP switch and jumper

DIP switch / Jumper	Description
DIP switch (NETWORK ID)	Not used
JP1	Not used



In normal operation, the JP1 jumper setting is to remain in the factory configuration, that is, jumper not installed.

2.2 Indicators

2.2.1 LED Indicators

The following figures and tables show and describe the UDMPM LED indicators.

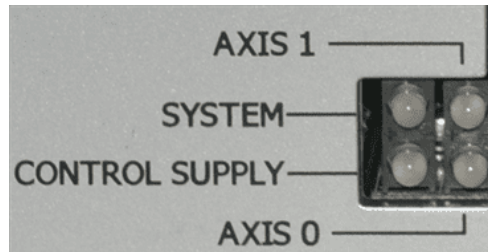


Figure 3-4. LED indicators




Figure 3-5. Drive supply indicator

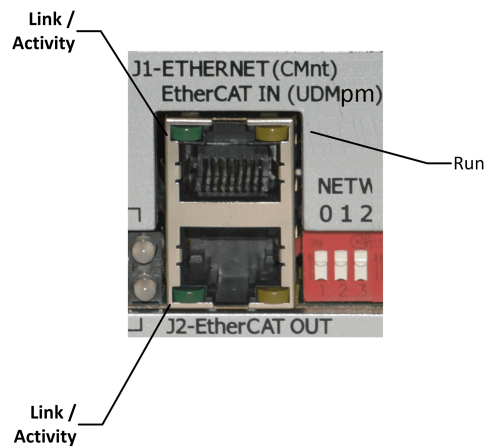


Figure 3-6. EtherCAT indicators

Table 3-3. LED indicators

Indication	Description
Axis 0 Axis 1	One bicolor LED for each drive: <ul style="list-style-type: none"> > Green - drive is enabled > Red - drive fault > Off – drive is disabled
System	One bicolor LED <ul style="list-style-type: none"> > Red – system fault > Green – system is OK > Blinking – software command
Control Supply	One green LED <ul style="list-style-type: none"> > On – control supply is On - voltage applied > Off - control supply is Off - voltage not applied
Link/Activity	Two green LEDs (one per port) <ul style="list-style-type: none"> > Off – No link > On – Link exists, no data transferred > Blinking – Data being transferred
Run	One yellow LED <ul style="list-style-type: none"> > Off – INIT state > On - Normal operation
Drive supply	One red LED <ul style="list-style-type: none"> > On - drive supply is On - voltage applied > Off – drive supply is Off - voltage not applied.

2.3 Package content

The UDMPM package contains the following items:

- > UDMPM module
- > J6 Control supply mating connector (see [J6 Control supply](#))
- > J10 drive supply mating connector (see [J10 Drive supply](#))
- > Connector kit for STO card (supplied only for units ordered with STO)

2.4 Optional accessories

2.4.1 Ethernet cables

ACS offers the following Ethernet CAT5e cables:

Table 3-4. Ethernet cables

Length [m]	Part number
0.3	SP+ECAT-CA-30CM-00
0.5	SP+ECAT-CA-50CM-00
1	SP+ECAT-CA-1M-00
2	SP+ECAT-CA-2M-00
3	SP+ECAT-CA-3M-00
5	SP+ECAT-CA-5M-00
10	SP+ECAT-CA-10M-00
15	SP+ECAT-CA-15M-00
20	SP+ECAT-CA-20M-00

2.4.2 Mating connectors kit

P/N: SPii+CMntUDMpm-ACC1

Description: UDMPM mating connectors kit

The mating connectors kit provides a set of mating connectors for the UDMPM. The kit includes:

Table 3-5. SPii+CMntUDMpm-ACC1 - Mating connectors kit contents

Quantity	Part description	Connector	Manufacturer	PN
1	D-type 44 pin high density female connector	J3	Unbranded / industry standard connector	NA
2	D-type cup 26 pin high density male connector	J4, J5	Unbranded / industry standard connector	NA
1	Control supply output connector	J7	Phoenix	MC-1.5/2 STF 3.81
2	Motor connector	J8, J9	Phoenix	MC-1.5/6 STF 5.08

Quantity	Part description	Connector	Manufacturer	PN
1	36 pin SCSI connector male, one piece cable housing, and metal shell with quick release latching	J11	Unbranded / industry standard connector	NA
1	Cable housing, 7 position with straight cable connection	J10	Phoenix	KGG-MSTB 2.5/7

2.4.3 J11 mating connector

P/N: SPii+CMntUDMpm-ACC2

Description: UDMPM J11 mating connector on a 2m cable with flying leads



The 2m SCSI connector to flying leads cable features a 36-wire flying leads end. The wire coding is shown below.

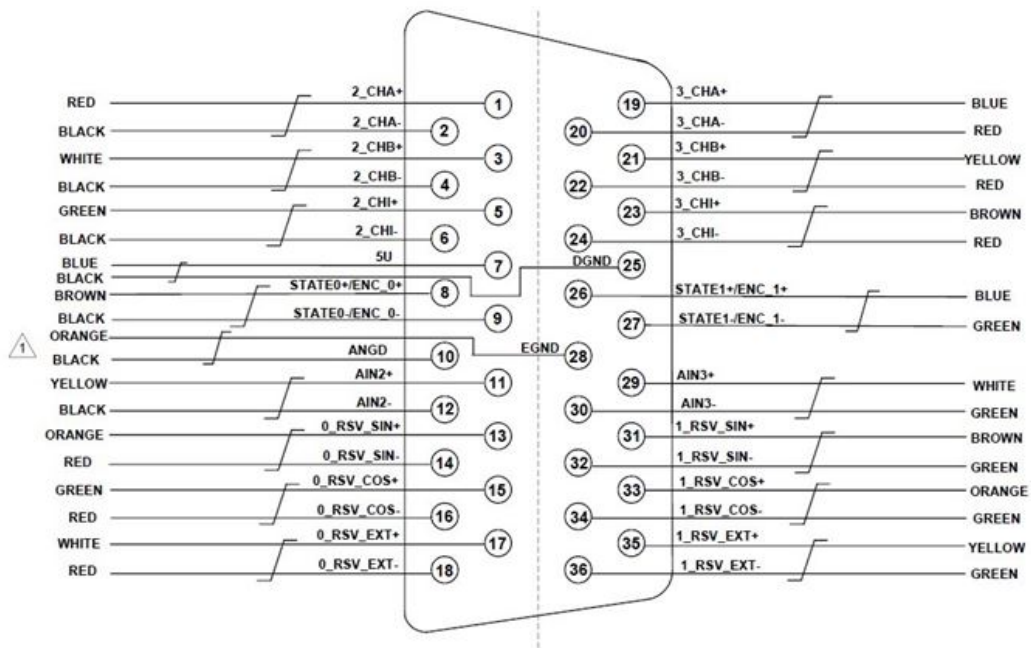


Figure 3-7. Cable kit

2.4.4 STO Accessory Kit

P/N: STO-ACC1

Description: 2 meter cable with flying leads



Figure 3-8. STO-ACC1 accessory kit

Table 3-6. STO-ACC1 Pinout

Pin	Wire color	Signal
1	Black	STO1-
2	Red	STO1+
3	Yellow	EGND
4	White	STO2+
5	Black	STO2-

2.5 Order part number

The ordering part number (P/N) contains several characters (see example in [Figure 3-9](#)) that each specify a configuration characteristic ordered for the UDMPM module, as described in [Table 3-7](#).

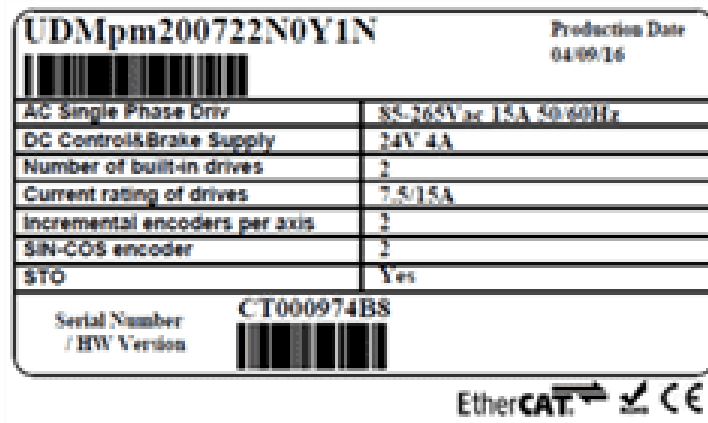


Figure 3-9. Label with ordered P/N example

Table 3-7. Configuration as indicated by P/N

Ordering options	Field	Example user selection	Available ordering option values
Number of drives (85Vac - 265Vac)	1	2	1,2
Continuous Current (Cont/Peak)	2	007	002 - 2.5A, 005 - 0.5A, 007 - 7.5A
250kHz SIN-COS (LT)	3	2	0, 1, 2
Encoder channels per axis	4	2	1, 2
Absolute encoder type ¹	5	N	N- None, E- EnDat 2.1(digital)/2.2, S- Smart-ABS, P- Panasonic, B- BiSS-A/B/C, H- Hiperface, R- Resolver, I- SSI
Number of absolute encoders interface	6	0	0, 1, 2
STO	7	Y	Y - Yes, N - No
EtherCAT Master	8	1	1 - Any ACS EtherCAT Master

¹All absolute encoder channels must be the same type

Ordering options	Field	Example user selection	Available ordering option values
I/O configuration	9	N	<p>N: Inputs & limits: 24V/SOURCE (PNP), <i>jjjj</i> Outputs: 24V/SOURCE (PNP). D: Identical to (N). For compatibility reasons. S: Inputs & limits: 24V/SINK (NPN), <i>jjjj</i> Outputs: 24V/SOURCE (PNP). U: Inputs: 24V/SOURCE (PNP), <i>cc</i> Limits: 24V/SINK (NPN), <i>cc</i> Outputs: 24V/SOURCE (PNP)</p>

As an example, P/N UDMpm200722N0Y1N would represent the configuration described in [Table 3-8](#) below.

Table 3-8. P/N example

Field		1	2	3	4	5	6	7	8	9
P/N	UDMpm	2	007	2	2	N	0	Y	1	N

3. Mounting

The UDMPM is mounted either horizontally or vertically, using M4 type Phillips screws as shown. Use two retaining screws on each side.

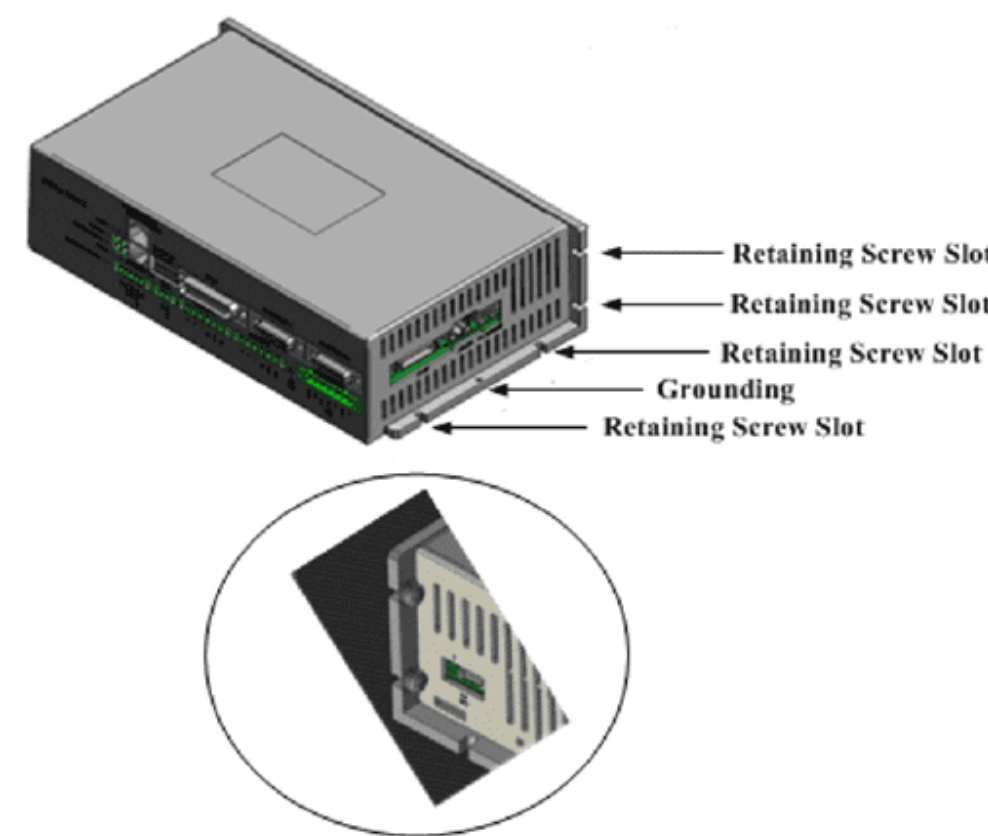


Figure 4-1. Retaining screw locations

When installing the UDMPM, an earth-ground must be connected as shown.

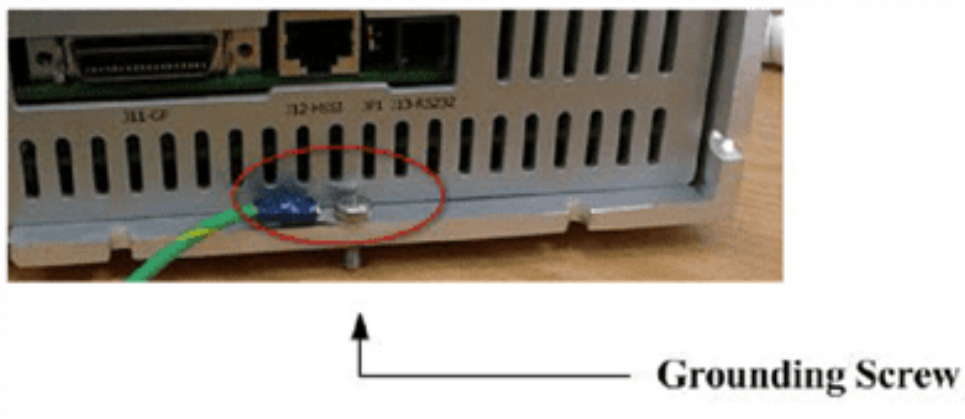


Figure 4-2. Grounding screw

4. Connections

The UDMPM is operated as an ACS EtherCAT network drive of 1 or 2 axes. For out of box operation follow the stages provided in this manual and that referred to in other ACS documents. The product's operation depends on ordered features.

This section describes how to interface with the UDMPM using proper safety, EMC, and wiring guidelines. Figure 5-1 depicts the UDMPM recommended scheme for shielding, cable connections, and type of grounding. Specific settings and configurations are described in the subsections below.

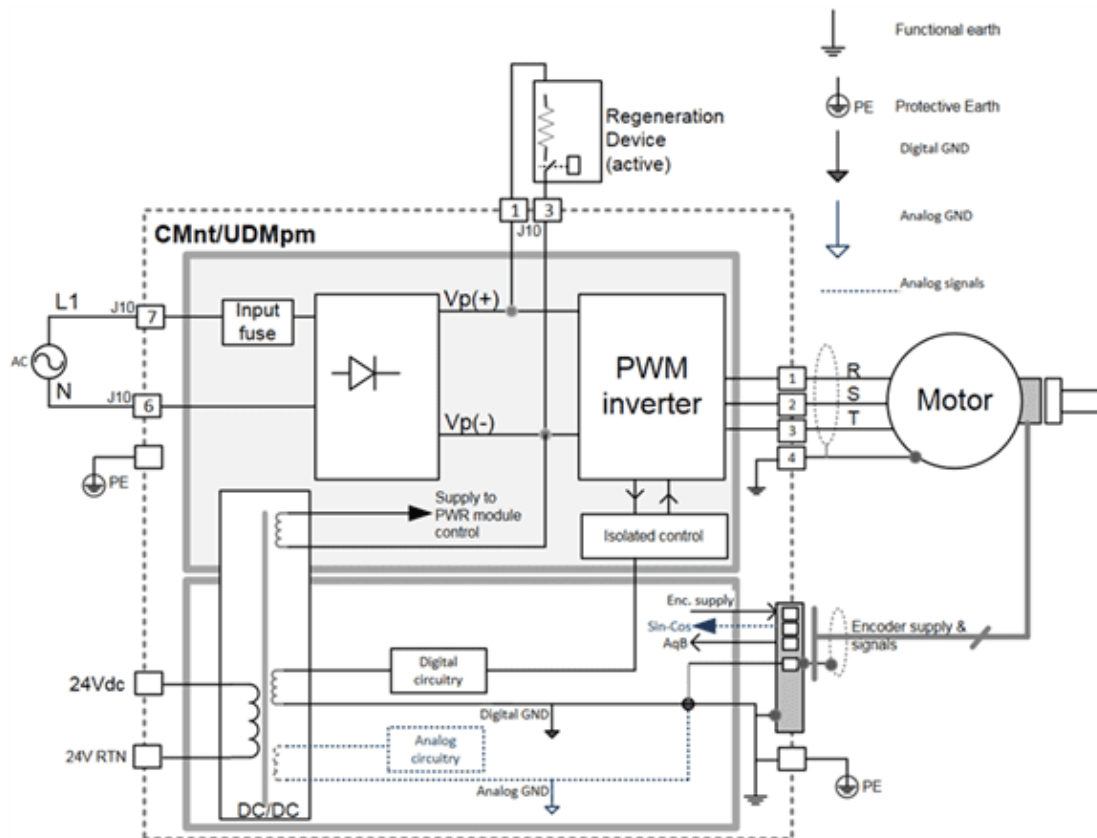


Figure 5-1. Grounding and shielding

4.1 Safety, EMC, and wiring guidelines

Make sure that the following guidelines and procedures are addressed and observed prior to powering and while handling any of the network elements. Observing these procedures is crucial in order to achieve safe and optimal operation of ACS networking provisions.

Installation and maintenance must be performed by qualified personnel only. Such a person must be trained and certified to install and maintain high power electrical and electro-mechanical equipment, servo systems, power conversion equipment, and distributed networks. Prior to powering up the system, ensure that all network components are properly installed mechanically, properly grounded, and that all attached power and signal cables are in good operating conditions. Maintenance is to be performed only after the relevant network element has been powered down

and all associated and surrounding moving parts have settled in their safe mode of operation. Certain drives require longer times in order to fully discharge.



In order to ensure that the internally stored energy has been fully discharged to a safe level that will not harm personnel exposed to the energy, allow a minimum of 5 minutes after powering down the UDMPM until handling or touching the unit. Provide special care while applying, removing, or touching connector J10 that contains (VBUS+ and VBUS-) bus voltage carrying wires.

Follow the hardware guide of each element and observe the residual discharge time specified. Avoid contact with electrostatic-sensitive components and take the required precautions.



All power terminals remain live for at least 5 minutes after the mains have been disconnected.

The UDMPM is powered up as long as an ACS inlet is connected to it. Therefore it is the responsibility of the user to provide an in-series switch or circuit breaker that disconnects all power-carrying signals which is readily and rapidly accessible to the operator. The disconnecting device must meet the requirements of IEC60947-1 or IEC60947-3 and the current rating must be not more than 20A. The disconnecting device must be in close proximity to the equipment, within easy reach of the operator, and be clearly marked as the disconnecting device for the UDMPM.

A power cord for the AC drive supply input must satisfy all the following:

- > A conductor area of not less than 0.75mm²
- > A voltage rating of not less than 300V
- > A temperature rating to 105°C or more
- > Complies with IEC60227 or IEC60245



Only the Green –Yellow wire of the cable is to be used for connection to the protective conductor terminal.

4.1.1 *Electro-magnetic immunity and interference considerations*

The following recommendations help minimize electromagnetic interference to the power supply and neighboring equipment and improve electromagnetic immunity.

- > Use an AC line filter and surge protection.
- > Use a motor filter, such as the MC4U-MF (see [Motor filter](#)), between the drive and the motor. The filter is to be connected as close as possible to the drive's output connectors.



The motor filter requires air flow cooling.

- > Use an EPCOS B84142-B25-R filter, or its equivalent, for AC supply interference protection.
- > Use motor cables that are:
 - > Shielded (meshwork of tinned, copper wire with high optical covering)
 - > Can withstand high voltage withstand
 - > Have a very low capacitance



The motor cables' shield is to be connected to motor connector pin 4 (see [Connection instructions](#)).

- > ACS specifies and tests its products using motor cable lengths of up to 10m lengths. Route the motor cables as far as possible from sensitive-signal carrying cables such as encoder cables. Install the encoder cables according to manufacturer recommendations.
- > Lightning protection on the supply AC lines is to be provided in the cabinet/machine where the ACS product is being used. It is recommended to install power surge lightning arrestors (varistors) between the AC terminals (L-N, L-PE, N-PE). ACS recommends using the MNF Würth Electronic, MNF P/N 820422711 varistor.

4.2 Connecting the UDMPM

Product set up consists of the following stages:



Read the safety instructions in Personnel Safety Guidelines and adhere to them closely.

1. Connect control cables using pre-wired cables. For a cables' pin out and connector details refer to the following sections.
2. Apply control and drive supply voltages and observe the LEDs. If STO is included in the product, apply control supply to both STO1 and STO2 inputs in order to enable a drives' operation. Refer to *AN STO Safe Torque Off Function* regarding the STO specification.
3. When setting up the product, all product settings are performed through the SPiiPlus MMI Application Studio, which is installed on a host computer connected to the network master, (refer to the *SPiiPlus Setup Guide*).
4. For operation and programming, refer to the *ACSPL+ Programmer's Guide* and the *SPiiPlus Command & Variable Reference Guide*.



During emergency conditions there is no need to remove the 24Vdc control supply.

4.3 Cooling

Airflow is to be provided by an external device, such as a fixed cooling fan.

4.3.1 Horizontal installation with cooling fan

If the UDMPM is mounted horizontally, apply forced cooling air either left-to-right (as shown below) or right-to left.



Figure 5-2. Horizontal installation with cooling fan

4.3.2 Vertical installation with cooling fan

If the UDMPM is mounted vertically, apply forced cooling air such that the direction of air flow is from the bottom to the top as shown.



Figure 5-3. Vertical installation with cooling fan

4.4 Power supplies

The UDMPM is fed by two power supplies:

- > Control supply: 24Vdc (J6)
- > Drive supply: 85 to 265Vac (J10)

The power supplies must be provided by the customer and be UL certified. Each power supply has a LED indicator on the unit.

4.4.1 J6 Control supply


An external 24Vdc ($\pm 10\%$, maximal rating 4A/100W) isolated power supply (not included with the unit) feeds all logic and control low voltage circuitry.

Regular operation consumes 2A. An additional 1A per axis (maximum) is needed during motor mechanical brake activation.

4.4.1.1 Description

Label: J6 CONTROL SUPPLY

Connector	
Manufacturer	Phoenix
Type	MC-1.5/5 GF 3.81
Version	5 pin header, pitch 3.81mm
P/N	NA



Mating Connector	
Manufacturer	Phoenix
Type	MC-1.5/5 STF 3.81
Version	5 pin plug, pitch 3.81mm
P/N	NA




Table 5-1. J6 connector pinout

Pin	Name	Description
1	24V_SUP	24V_SUP 24V control supply
2	24V_RTN	24V control supply return
3	5V_ENC_EXT	External supply for Encoder
4	5V_ENC_EXT_R TN	External supply return for Encoder
5	EGND	Shield

4.4.2 J10 Drive supply

The UDMPM is supplied by an external isolated 85 to 265Vac single motor drive supply (not included with the unit). The AC supply is internally rectified to 120 to 370Vdc and the resulting DC voltage feeds the motor drives.

- > The current is limited by a protective fuse and connector to 15A.
- > The drive supply input fuse is rated 20A at 250Vac or 125Vdc.




When supplying DC voltage higher than 125Vdc, an appropriate external protection device (with respect to voltage and current ratings) must be used.

4.4.2.1 Description

Label: J10 DRIVE SUPPLY

Connector	
Manufacturer	Degson
Type	Plug-in terminal block
Version	2EDGRM-5.08, 7 pin, male
P/N	NA



Mating Connector	
Manufacturer	Degson
Type	Plug-in terminal block
Version	2EDGKFM-5.08, 7-pin, female
P/N	NA




Table 5-2. J10 connector pinout

Pin	Name	Description
1	VBUS+	DC drive supply positive, for external regeneration circuit, increasing bus capacitance and parallel connection
2	N/C (REG)	Not connected (regeneration resistor output in case of internal regeneration version).
3	VBUS-	DC drive supply return, for external regeneration circuit, increasing bus capacitance and parallel connection
4	PE	EGND, protected earth.
5	N/C	Not connected
6	N	AC input neutral
7	L1	AC input phase

4.5 EtherCAT




All ACS products are tested with 50 m cables between adjacent nodes. At lengths of up to 100 m it is recommended to test performance as function of network complexity and operating environment.

4.5.1 J1 EtherCAT input connector

Label: J1 ETHERCAT IN

Connector	
Manufacturer	Unbranded - industry standard connector
Type	Socket
Version	RJ-45 type 8 pin
P/N	NA



Mating Connector	
Manufacturer	Unbranded - industry standard connector
Type	Plus
Version	RJ-45 type 8 pin
P/N	NA




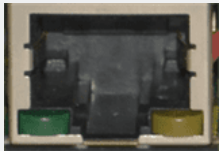
Table 5-3. J1 connector pinout

Pin	Name	Description
1	TD+	Positive transmit signal
2	TD-	Negative transmit signal
3	RD+	Positive receive signal
4	N/C	Not connected
5	N/C	Not connected

Pin	Name	Description
6	RD-	Negative receive signal
7	N/C	Not connected
8	N/C	Not connected

4.5.2 J2 EtherCAT output connector

Label: J2 ETHERCAT OUT

Connector	
Manufacturer	Unbranded - industry standard connector
Type	Socket
Version	RJ-45 type 8 pin
P/N	NA
	


Mating Connector	
Manufacturer	Unbranded - industry standard connector
Type	Plug
Version	RJ-45 type 8 pin
P/N	NA
	

Table 5-4. J2 connector pinout

Pin	Name	Description
1	TD+	Positive transmit signal
2	TD-	Negative transmit signal
3	RD+	Positive receive signal
4	N/C	Not connected
5	N/C	Not connected
6	RD-	Negative receive signal
7	N/C	Not connected
8	N/C	Not connected

4.6 I/O

4.6.1 J3 input / output connector

Label: J3 I/O


Connector	
Manufacturer	Unbranded - industry standard connector
Type	D-sub
Version	DB-44 high density male
P/N	NA
	
Mating Connector	
Manufacturer	Unbranded - industry standard connector
Type	D-sub
Version	DB-44 high density female



Table 5-5. J3 connector pinout

Pin	Name	Description
1	OUT1	Digital Output 1
2	OUT3	Digital Output 3
3	OUT5	Digital Output 5
4	OUT7	Digital Output 7
5	IN1	Digital Input 1
6	IN3	Digital Input 3
7	0_LL	Axis 0 Left Limit
8	1_LL	Axis 1 Left Limit
9	ES+	E-STOP non-inverted input
10	AIN0-	Analog Input 0 inverted
11	AOUT0+	Analog Output 0 non-inverted
12	MARK1+	MARK 1 non-inverted
13	PEG0+	PEG 0 Output non-inverted
14	PEG1+	PEG 1 Output non-inverted
15	DGND	Digital ground
16	OUT0	Digital Output 0
17	OUT2	Digital Output 2
18	OUT4	Digital Output 4

Pin	Name	Description
19	OUT6	Digital Output 6
20	IN0	Digital Input 0
21	IN2	Digital Input 2
22	O_RL	Axis 0 Right Limit
23	1_RL	Axis 1 Right Limit
24	ES-	E-STOP inverted input
25	AIN0+	Analog Input 0 non-inverted
26	AIN1+	Analog Input 1 non-inverted
27	AOUT0-	Analog Output 0 inverted
28	MARK1-	MARK 1 inverted
29	PEGO-	PEG 0 Output inverted
30	PEG1-	PEG 1 Output inverted
31	V_SUP_IO	IO supply
32	V_RTN_IO	IO supply return
33	IN4	Digital Input 4
34	IN5	Digital Input 5
35	IN6/MARK2	Digital Input 6 or MARK 2
36	IN7/MARK3	Digital Input 7 or MARK 3
37	V_SUP_SFTY	Safety Supply
38	V_RTN_SFTY	Safety Supply Return
39	ANGD	Analog ground
40	AIN1-	Analog Input 1 inverted
41	AOUT1+	Analog Output 1 non-inverted
42	AOUT1-	Analog Output 1 inverted

Pin	Name	Description
43	MARK0+	MARK 0 non-inverted
44	MARK0-	MARK 0 inverted



V_RTN_I0 is common for all Digital Inputs.

4.6.1.1 Connection schematics

Connection schematics are shown for the following:

- > General purpose analog inputs
- > Limit connections
- > Emergency stop input
- > Digital input connections
- > Digital output connections

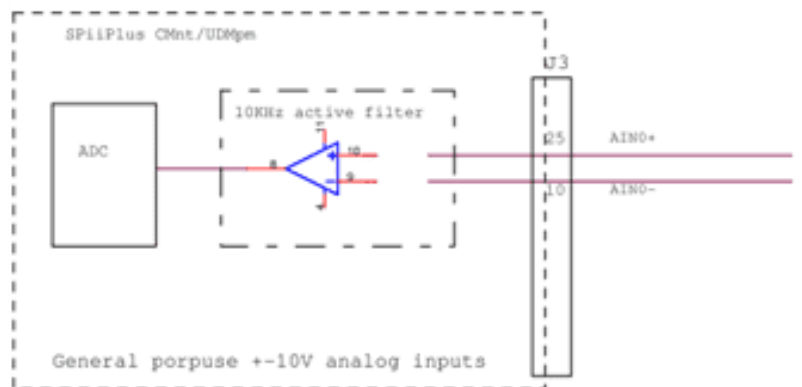


Figure 5-4. General purpose analog inputs

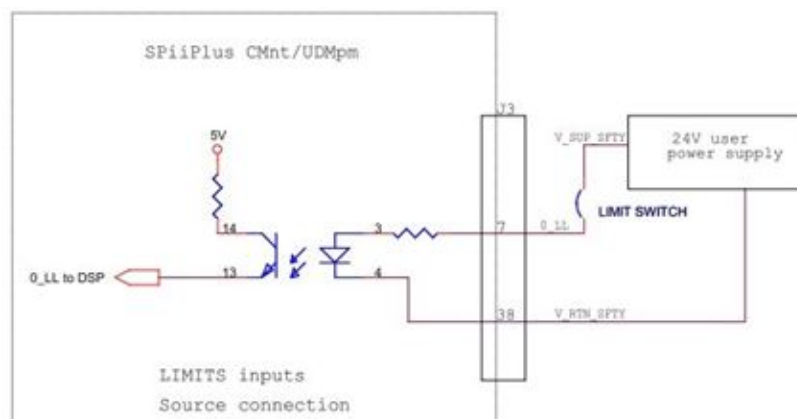


Figure 5-5. Limit connections

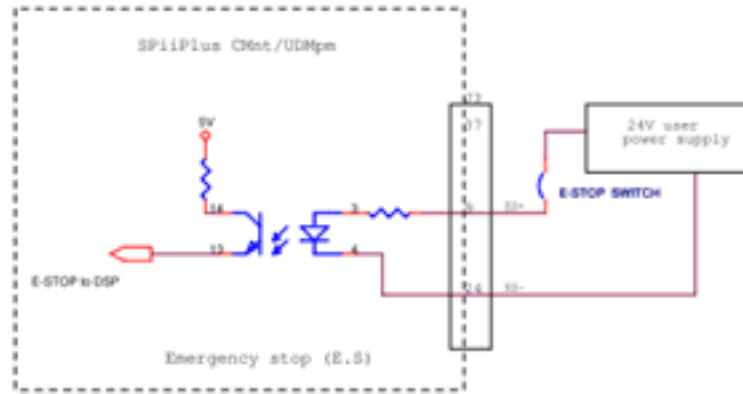


Figure 5-6. Emergency stop input

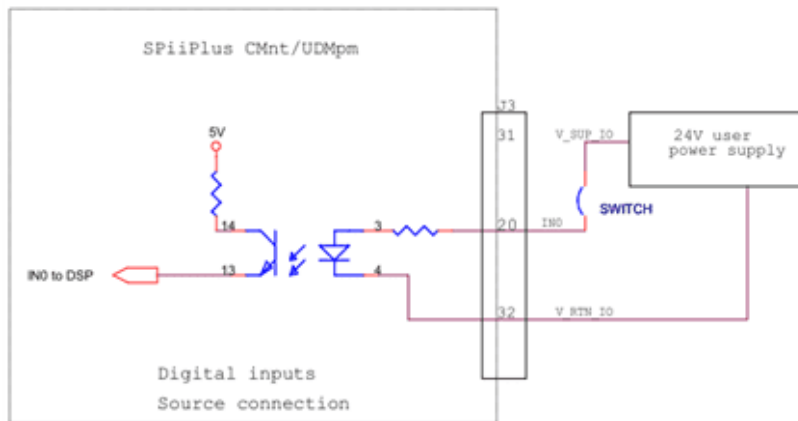


Figure 5-7. Digital input connections

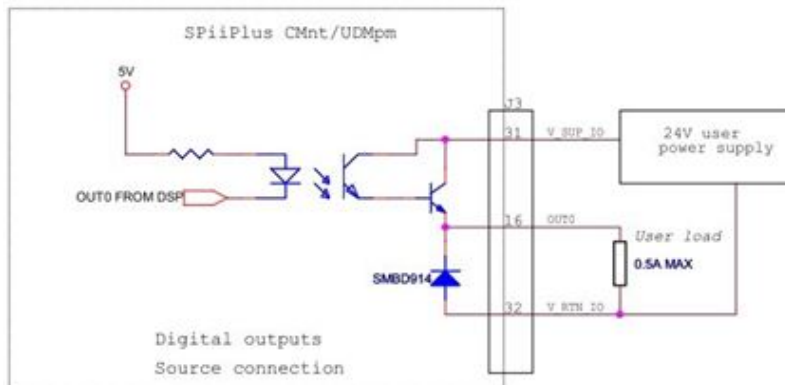


Figure 5-8. Digital output connections



Over current protection (per pin) is activated above 0.7 to 1.7A, causing the output enter a protected mode, without any message given to the user. The output self recovers upon returning to specified performance values.

4.6.1.2 Registration MARK Inputs

The following MARK inputs are supported: MARK0 and MARK1 (RS422), and two shared opto-isolated interfaces (IN6 and IN7, referred to as MARK2 and MARK3), and two regular digital inputs: IN4 and IN5. Each of the two encoders available per axis can be latched independently to two latching-registers (A and B, used as variables "MARK" and "MARK2", respectively) by the above MARK input signal sources, as detailed in [Table 5-6](#).

Table 5-6. Registration MARK sources per encoder

Axis / Encoder	Latching Register	Dedicated Opto-Isolated RS422 Source	Shared Opto-Isolated Source	Shared Regular Input
Axis 0 Encoder 0	A	MARK0	IN6	
	B	MARK1	IN7	
Axis 0 Encoder 1	A	MARK0 MARK1	IN6	IN4
	B	MARK1	IN7	IN5
Axis 1 Encoder 0	A	MARK0 MARK1	IN6	
	B	MARK1	IN6 IN7	
Axis 1 Encoder 1	A	MARK0 MARK1	IN6	
	B	MARK1	IN7	



Latching register **A** is associated with the ACSPL+ variable: **MARK**; and latching register B is associated with the ACSPL+ variable: **M2ARK**. See *SPIIPlus Command & Variable Reference Guide* for details on these variables.

For the circuit description, refer to the digital input opto-isolated interface description in [Figure 5-8](#).

The opto-isolated MARK inputs have a propagation delay of up to 200 ns. Regular Input MARK signals have a propagation delay of 50 ns.

The selection of the specific MARK signal is done by using the ACSPL+ ASSIGNFINS command for setting input pins assignment and mapping between FGP_IN signals to the bits of the IN variable (refer to the *SPIIPlus Command & Variable Reference Guide*).

4.6.1.3 Position Event Generation (PEG)

The UDMPM advanced Position Event Generator (referred to also as Output Compare) output supports incremental and random modes (256 events per burst). The maximal burst rate in random mode is 10Mhz.

The two PEG pulses and two PEG state TTL signals can be associated with any of the incremental or Sin-Cos encoders, to be used by any of the two axes, and can be programmed for polarity and shape. Their functionality is determined by three independent PEG engines.

The Incremental PEG mode provides the ability to generate a fixed width pulse whenever a fixed position interval has passed, starting at a predefined start point and ending at a predefined end point.


The Random PEG mode provides the ability to control a PEG pulse and a two-bit STATE vector at pre-defined positions, which are stored as a 256 member user-defined array.

Refer to the *PEG and MARK Operations Application Notes* for more details.

4.6.2 J7 24V output supply connector

Label: J7 24V OUTPUT SUPPLY

Connector	
Manufacturer	PHOENIX
Type	MC-1.5/2 GF 3.81
Version	2 pin, pitch 3.81
P/N	NA



Mating Connector	
Manufacturer	PHOENIX
Type	MC-1.5/2 STF 3.81
Version	2 pin, pitch 3.81
P/N	NA

Mating Connector



Table 5-7. J7 connector pinout

Pin	Name	Description
1	24V_SUP_OUT	24V logic supply output (up to 5A)
2	24V_RTN	24V logic supply return

4.6.3 J11 general purpose connector

Label: J11 GP

Connector	
Manufacturer	Unbranded - industry standard
Type	D-sub SCSI
Version	36 pin female 1,27mm
P/N	NA



Mating Connector

Manufacturer	Unbranded - industry standard
Type	D-sub SCSI
Version	36 pin SCSI male



Table 5-8. J11 connector pinout


Pin	Name	Description
1	2_CHA+	Axis 2 Encoder A non-inverted input
2	2_CHA-	Axis 2 Encoder A inverted input
3	2_CHB+	Axis 2 Encoder B non-inverted input
4	2_CHB-	Axis 2 Encoder B inverted input
5	2_CHI+	Axis 2 Encoder Index non- inverted input
6	2_CHI-	Axis 2 Encoder Index inverted input
7	5U	5V user supply for Digital Encoder and Hall
8	STATE0+/ENC_0+	PEG STATE 0 non-inverted output or Encoder 0 non-inverted output
9	STATE0- /ENC_0-	PEG STATE 0 inverted output or Encoder 0 inverted output
10	ANGD	Analog ground
11	AIN2+	Analog Input 2 non-inverted
12	AIN2-	Analog Input 2 inverted
13	0_RSV_SIN+	Axis 0 Resolver SIN non-inverted input
14	0_RSV_SIN-	Axis 0 Resolver SIN inverted input
15	0_RSV_COS+	Axis 0 Resolver COS non- inverted input

Pin	Name	Description
16	0_RSV_COS-	Axis 0 Resolver COS inverted input
17	0_RSV_EXT+	Axis 0 Resolver EXT non-inverted output
18	0_RSV_EXT-	Axis 0 Resolver EXT inverted output
19	3_CHA+	Axis 3 Encoder A non-inverted input
20	3_CHA-	Axis 3 Encoder A inverted input
21	3_CHB+	Axis 3 Encoder B non-inverted input
22	3_CHB-	Axis 3 Encoder B inverted input
23	3_CHI+	Axis 3 Encoder Index non- inverted input
24	3_CHI-	Axis 3 Encoder Index inverted input
25	DGND	Digital ground
26	STATE1+/ENC_1+	PEG STATE 1 non-inverted output or Encoder 1 non-inverted output
27	STATE1- / ENC_1-	PEG STATE 1 inverted output or Encoder 1 inverted output
28	EGND	Shield
29	AIN3+	Analog Input 3 non-inverted
30	AIN3-	Analog Input 3 inverted
31	1_RSV_SIN+	Axis 1 Resolver SIN non-inverted input
32	1_RSV_SIN-	Axis 1 Resolver SIN inverted input
33	1_RSV_COS+	Axis 1 Resolver COS non- inverted input
34	1_RSV_COS-	Axis 1 Resolver COS inverted input
35	1_RSV_EXT+	Axis 1 Resolver EXT non-inverted output
36	1_RSV_EXT-	Axis 1 Resolver EXT inverted output

4.6.4 J12 HSSI connector

Label: J12

Connector	
Manufacturer	Unbranded - industry standard
Type	Socket
Version	RJ-45 type 8-pin
P/N	NA

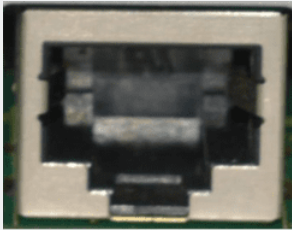

Mating Connector	
Manufacturer	Unbranded - industry standard connection
Type	Plug
Version	RJ-45 type 8 pin
P/N	NA




Table 5-9. J12 connection pinout

Pin	Name	Description
1	CONTROL_#+	Control signal non-inverted output for channel 0
2	CONTROL_#-	Control signal inverted output for channel 0
3	SER_DI_#+	Serial data non-inverted input for channel 0
4	SER_DI_#-	Serial data inverted input for channel 0

Pin	Name	Description
5	SER_DO_#+	Serial data non-inverted output for channel 0
6	SER_DO_#-	Serial data inverted output for channel 0
7	DGND	Digital ground
8	DGND	Digital ground

4.6.5 J13 RS232 Serial COM1 port connector (not used)

4.6.6 J14 Safe Torque Off (STO)



STO is an optional feature. The STO circuit functionality is designed and tested by ACS to comply with the requirements of EN ISO 13849-1, EN 62061, and IEC 61800-5-2 standards.

STO (The Safe Torque Off) is the fundamental safety capability needed to prevent motors from moving during a safety event.

STO capability prevents the moving of the motor using two hardware inputs, STO1 and STO2 that block the PWM signals to the power stage of the drive. A 24V (18Vdc to 33Vdc) must be connected to both inputs to enable the drive's regular operation. When the 24V is removed from one or both STO inputs, the PWM signals are blocked at least 50msec afterwards but not more than 200msec afterwards. In addition, the controller is informed about this event. This delay (between informing the controller and blocking of the PWM signals of the drive) provides the controller the ability to bring all axes to a complete stop (or low velocity movement) in an orderly manner. The implementation of the STO guarantees that under any foreseen circumstances, failure or damage, any of following types of motors will not move:

- > AC synchronous / DC brushless
- > Step motor

For DC brush motor, removing the 24V from both STO inputs, guarantees that under any foreseen circumstances, failure or damage, the motor will not move.

Usually, STO1 and STO2 are connected to a 24V source via industry standard safety switch. This device disconnects the 24V upon opening a door, a light current tripping, or other safety related event.

4.6.6.1 Description

Label: J14 STO

Connector	
Manufacturer	JST
Type	Shrouded header
Version	SM05B-PASS-1, 5 male, 5 pin, pitch 2mm
P/N	NA



Mating Connector	
Manufacturer	JST
Type	Crimp position socket
Version	Housing: PAP-05V-S Contact: SPHD-001T-P0.5 female, 5 pin, pitch 2mm
P/N	PAP-05V-S



Table 5-10. J14 connection pinout

Pin	Name	Description
1	ST01-	Safety torque input 1 inverted input
2	ST01+	Safety torque input 1 non-inverted input
3	EGND	Electrical ground
4	ST02+	Safety torque input 2 non-inverted input
5	ST02-	Safety torque input 2 inverted input

4.6.6.2 Connection instructions

Figure 5-9 describes a wiring scheme of a safety relay, controlled in this example by a PLC safety device.

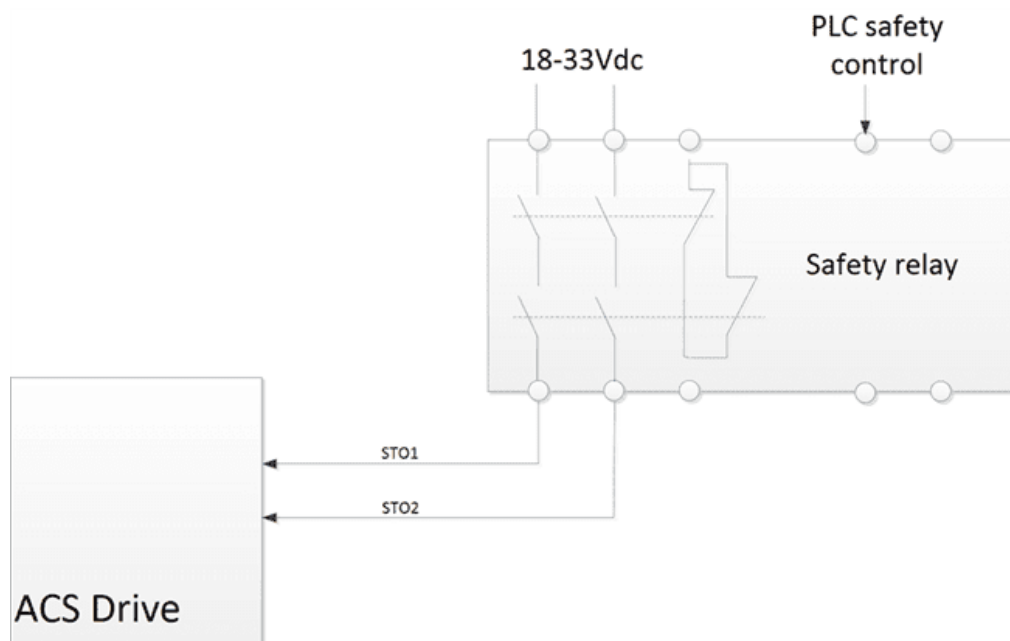


Figure 5-9. STO wiring scheme

The STO inputs can be also fed from a door switch, a light-curtain, or any other safety related controller.

Figure 5-10 describes a schematic STO implementation. The STO inputs feed the power (through additional circuitry which is not shown in the figure) to the upper and lower PWM drivers of the corresponding transistors.

The STO circuit is implemented on a dedicated module that plugs into all ACS products that support this functionality.

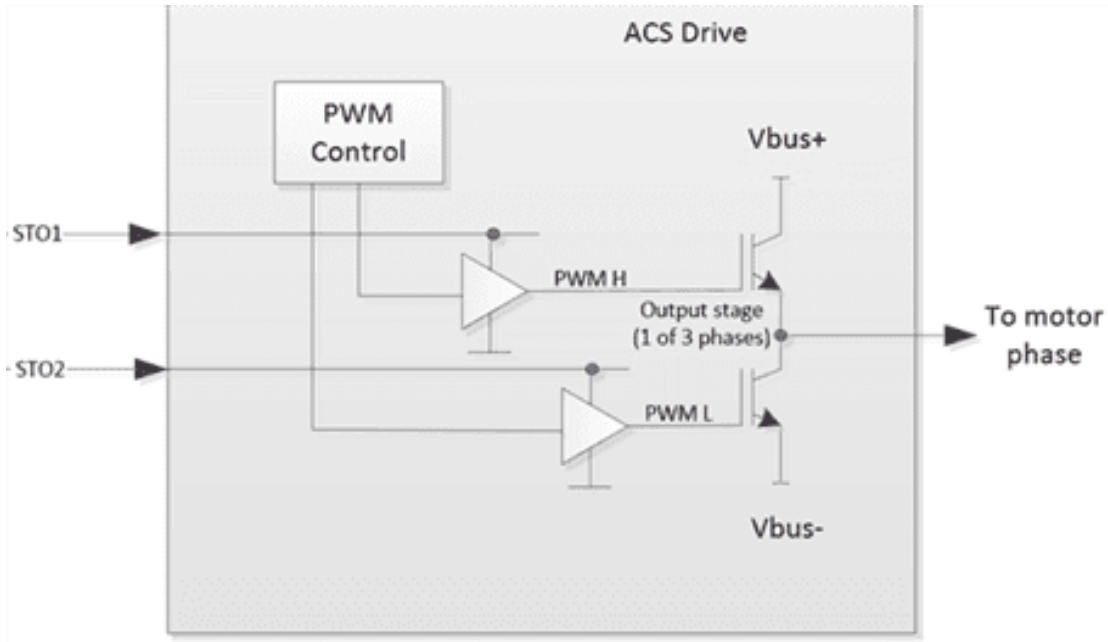


Figure 5-10. STO implementation

4.7 Encoder feedback


The following feedback types are supported:

1. Incremental digital encoder (1 or 2 per axis)
2. 250kHz analog SIN-COS encoder (optional 1 per axis)
3. Resolver (optional 1 per axis)
4. Hall sensors (1 set per axis)
5. Absolute digital encoder (optional 1 set per axis)


4.7.1 J4, J5 encoder connectors

Label: J4 1(Y), J5 0(X)

Connector	
Manufacturer	Unbranded - industry standard
Type	D-sub
Version	DB26 high density female
P/N	NA

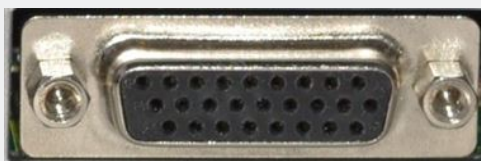

Mating Connector	
Manufacturer	Unbranded - industry standard
Type	D-sub
Version	DB26 high density male
P/N	NA




The dollar sign (\$) in the table refers to the axis designations which can be 0 or 1 depending on the connector.

Table 5-11. J4, J5 connectors pinout

Pin	Name	Description
1	\$_CHA-	\$ Encoder A inverted input
2	\$_CHB-	\$ Encoder B inverted input
3	\$_CHI-	\$ Encoder Index inverted input
4	\$_HB	\$ Motor Hall B
5	V_SUP_SFTY	Supply for limits input
6	\$_RL	\$ Right Limit
7	\$_SIN-	\$ Encoder SIN inverted input
8	\$_COS-	\$ Encoder COS inverted input
9	\$_SC_I-	\$ Encoder SIN-COS Index inverted input
10	\$_CHA+	\$ Encoder A non-inverted input
11	\$_CHB+	\$ Encoder B non-inverted input
12	\$_CHI+	\$ Encoder Index non-inverted input

Pin	Name	Description
13	\$_HA	\$ Motor Hall A
14	\$_HC	\$ Motor Hall C
15	\$_LL	\$ Left Limit
16	\$_SIN+	\$ SIN non-inverted input
17	\$_COS+	\$ COS non-inverted input
18	\$_SC_I+	\$ Encoder SIN-COS Index non-inverted input
19	5U	5V user supply for Digital Encoder and HALL
20	5U_RTN	5V return user supply for Digital Encoder, a return for \$ Motor temperature sensor, and return for HALL
21	Shield	Shield
22	\$_MTMP	\$ Motor Over-Temperature
23	V_RTN_IO	Return supply IO (not used)
24	V_RTN_SFTY	A return for Right and Left Limits input
25	SF	5V user supply for Analog Encoder and HALL
26	SF_RTN	5V return user supply for Analog Encoder and HALL

4.7.1.1 Absolute encoder interface

Absolute encoder's interfaces (pins and electrical circuitry) are shared with Digital Incremental (AqB) and with Sin-Cos encoder's interfaces, according to the table below:

Table 5-12. Absolute encoder reference

Absolute encoder type	Encoder's interface	Controller's interface
Endat 2.2	RS485 bidirectional Data	CHA
	RS422 Clock (encoder input)	CHB
Smart ABS / Panasonic	RS485 bidirectional Data	CHA
BiSS / SSI	RS485 bidirectional Data	CHA
	RS422 Clock (encoder input)	CHB (controller's output)

Absolute encoder type	Encoder's interface	Controller's interface
Hiperface	RS485 bidirectional Data	CHA
	Sin output	Cos input
	Cos output	Sin input

The digital bidirectional communication data channel is shared with CHA (data).

The Clock line interfaces to the controller's CHB.

Hiperface uses in addition to the digital bidirectional data channel the analog Sin and Cos interfaces, see [Figure 5-14](#).

4.7.2 Connection schematics

Connection schematics are shown for the following:

- > [Incremental digital AqB encoder connections](#)
- > [Hall sensors connection](#)
- > [Sin-Cos encoder connections](#)
- > [Absolute encoder hiperface schematic diagram](#)
- > [Absolute encoder schematic diagram](#)
- > [Absolute encoder bidirectional schematic diagram](#)

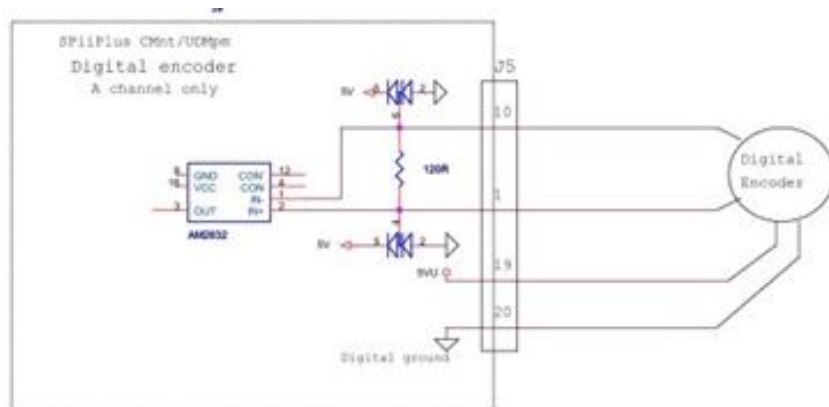


Figure 5-11. Incremental digital AqB encoder connections

The connection is a protected RS-422 differential line with 120Ω termination.

Encoders are fed by a 5V±5% 250mA supply (the total available current to all encoders) referenced to a digital ground. By special factory order, an additional encoder current supply of 5V/1A can be provided through the same line by connecting an external supply to the J6 connector and by an appropriate internal jumper setting.

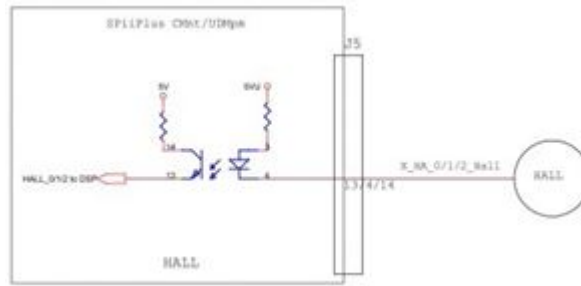


Figure 5-12. Hall sensors connection

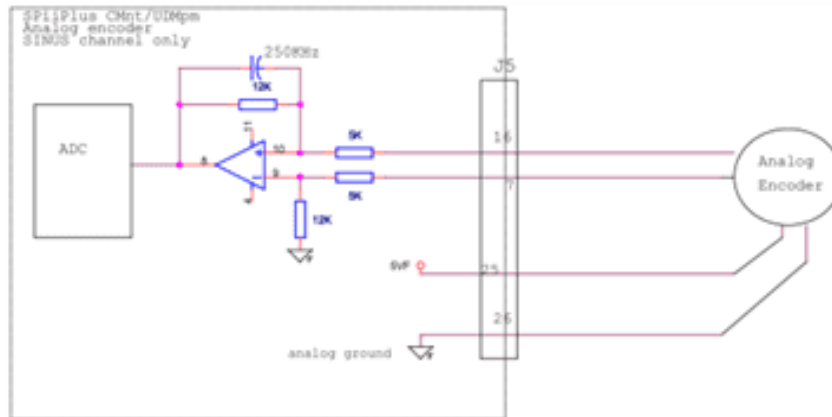


Figure 5-13. Sin-Cos encoder connections

The Sine, Cosine and Index signal interface has a 52dBm SNR and the Sin and Cos inputs are sampled at 20kHz, 12 bit resolution.

A software based Offset, Gain and Phase compensation can be set using the MMI Application Studio Sin Cos Encoder Compensation tool which optimizes and sets the compensation values, stores the optimized values and displays the results graphically.

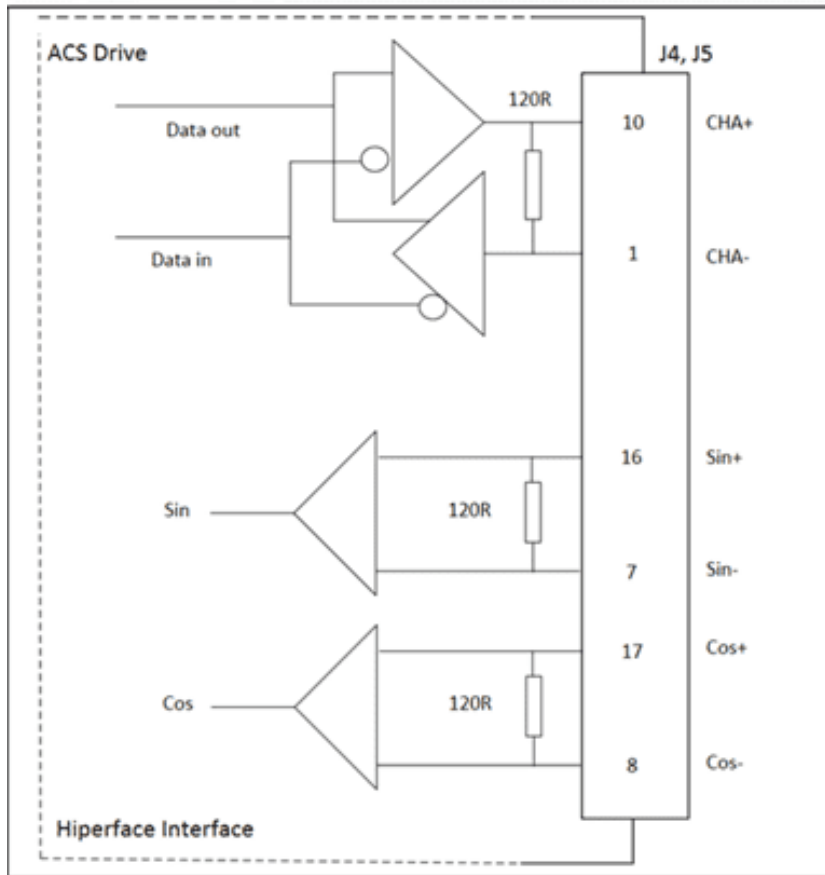


Figure 5-14. Absolute encoder hiperface schematic diagram

Bi-directional RS485 data channels uses CHA of the digital incremental encoder, and when clock is provided to the encoder, then CHB of the corresponding digital incremental encoder is used, see [Figure 5-15](#) and [Figure 5-16](#).

The setting is performed by software.


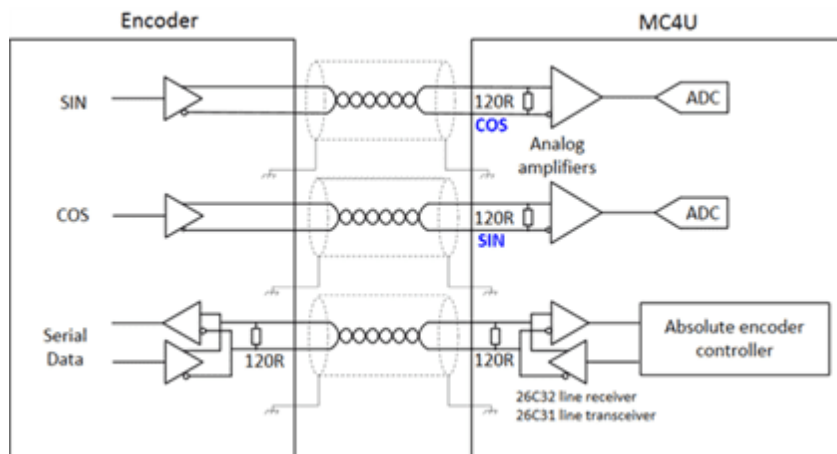


Figure 5-15. Absolute encoder schematic diagram

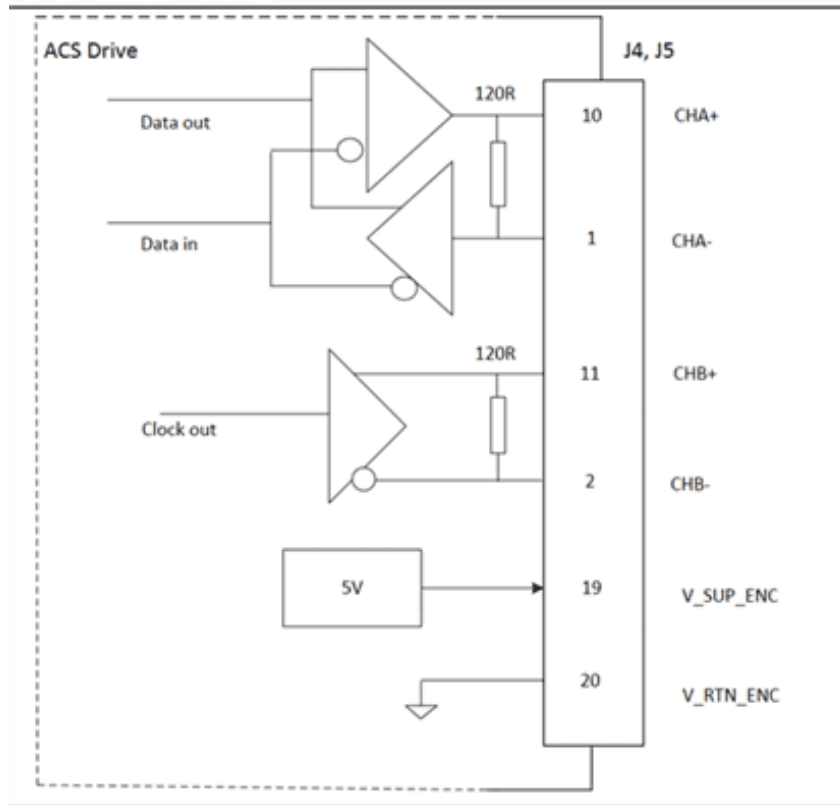

Absolute Encoder Interface: bidirectional data and clock

Figure 5-16. Absolute encoder bidirectional schematic diagram

4.7.3 Encoder types and assignment

Certain constraints result from sharing internal resources and connector pins for the UDMPM. Detailed data for using an encoder with a resolver is employed in [Encoder configurations with resolver](#) and if no resolver is employed in [Encoder configurations with no resolver](#).

4.7.3.1 Encoder configurations with resolver

Table 5-13 details all possible encoder configurations for the UDMPM if a resolver is employed.

Table 5-13. UDMPM encoder configuration with resolver

Ordered			Possible combinations					
Incremental Digital Encoder	SIN COS Encoder	Resolver	Encoder 0 (J5)	Encoder 1 (J4)	Resolver 0 (J11)	Resolver 1 j(11)	Encoder 2 (j11)	Encoder 3 (J11)
2 (1 per axis)	0	0	Incremental	Incremental	Not used		Not used	
2 (1 per axis)	0	1	Incremental	Incremental			Not used	
			Incremental			Resolver		
2 (1 per axis)	0	2		Incremental	Resolver		Not used	
			Incremental			Resolver		
				Incremental	Resolver			
					Resolver	Resolver		

Ordered			Possible combinations					
Incremental Digital Encoder	SIN COS Encoder	Resolver	Encoder 0 (J5)	Encoder 1 (J4)	Resolver 0 (J11)	Resolver 1 j(11)	Encoder 2 (j11)	Encoder 3 (J11)
2 (1 per axis)	1	0	Incremental	Incremental			Not used	
			Incremental	SIN-COS				
			SIN-COS	Incremental				
2 (1 per axis)	1	1	Incremental	Incremental			Not used	
			Incremental			Resolver		
				Incremental	Resolver			
			Incremental	SIN-COS				
			SIN-COS	Incremental				
			SIN-COS			Resolver		
				SIN-COS	Resolver			

Ordered			Possible combinations					
Incremental Digital Encoder	SIN COS Encoder	Resolver	Encoder 0 (J5)	Encoder 1 (J4)	Resolver 0 (J11)	Resolver 1 (j11)	Encoder 2 (j11)	Encoder 3 (J11)
2 (1 per axis)	2	0	Incremental	Incremental	Not used		Not used	
			Incremental	SIN-COS				
			SIN-COS	Incremental				
			SIN-COS	SIN-COS				
2 (1 per axis)	2	2	Any	Any	Resolver if SIN-COS is not used by J5	Resolver if SIN-Cos is not used by J4	Not used	
4 (2 per axis)	0	0	Incremental	Incremental			Incremental	Incremental
4 (2 per axis)	0	1	Incremental	Incremental			Incremental	Incremental
			Incremental			Resolver		
				Incremental	Resolver			

Ordered			Possible combinations					
Incremental Digital Encoder	SIN COS Encoder	Resolver	Encoder 0 (J5)	Encoder 1 (J4)	Resolver 0 (J11)	Resolver 1 j(11)	Encoder 2 (j11)	Encoder 3 (J11)
4 (2 per axis)	0	2	Incremental	Incremental			Incremental	Incremental
			Incremental			Resolver		
				Incremental	Resolver			
					Resolver	Resolver		
4 (2 per axis)	1	0	Incremental	Incremental			Incremental	Incremental
			Incremental	SIN-COS				
			SIN-COS	Incremental				

Ordered			Possible combinations					
Incremental Digital Encoder	SIN COS Encoder	Resolver	Encoder 0 (J5)	Encoder 1 (J4)	Resolver 0 (J11)	Resolver 1 j(11)	Encoder 2 (j11)	Encoder 3 (J11)
4 (2 per axis)	1	1	Incremental	Incremental			Incremental	Incremental
			Incremental			Resolver		
				Incremental	Resolver			
			Incremental	SIN-COS				
			SIN-COS	Incremental				
			SIN-COS			Resolver		
				SIN-COS	Resolver			
4 (2 per axis)	2	0	Incremental	Incremental			Incremental	Incremental
			Incremental	SIN-COS				
			SIN-COS	Incremental				
			SIN-COS	SIN-COS				

Ordered			Possible combinations					
Incremental Digital Encoder	SIN COS Encoder	Resolver	Encoder 0 (J5)	Encoder 1 (J4)	Resolver 0 (J11)	Resolver 1 j(11)	Encoder 2 (j11)	Encoder 3 (J11)
4 (2 per axis)	2	2	Any	Any	Resolver if SIN-COS is not used by J5	esolver if SIN-COS is not used by J4	Incremental	Incremental

4.7.3.2 Encoder configurations with no resolver

Table 5-14 details all possible encoder configurations for the UDMPM if a resolver is not employed.

Table 5-14. UDMPMencoder configuration without resolver

Ordered			Possible combinations					
Incremental Digital Encoder	SIN COS Encoder	Resolver	Encoder 0 (J5)	Encoder 1 (J4)	Encoder 2 (J11)	Encoder 3 (J11)	Resolver 0 (J11)	Resolver 1 (J11)
2 (1 per axis)	0	0	Incremental	Incremental	Not used		Not used	
2 (1 per axis)	0	1	Incremental	Incremental	Not used		Not used	
			Incremental	Absolute				
			Absolute	Incremental				
2 (1 per axis)	0	2	Incremental	Incremental	Not used		Not used	
			Incremental	Absolute				
			Absolute	Incremental				
			Absolute	Absolute				

Ordered			Possible combinations					
Incremental Digital Encoder	SIN COS Encoder	Resolver	Encoder 0 (J5)	Encoder 1 (J4)	Encoder 2 (J11)	Encoder 3 (J11)	Resolver 0 (J11)	Resolver 1 (J11)
2 (1 per axis)	1	0	Incremental	Incremental	Not used		Not used	
			Incremental	SIN-COS				
			SIN-COS	Incremental				
2 (1 per axis)	1	1	Incremental	Incremental	Not used		Not used	
			Incremental	Absolute				
			Absolute	Incremental				
			Incremental	SIN-COS				
			SIN-COS	Incremental				
			SIN-COS	Absolute				
			Absolute	SIN-COS				

Ordered			Possible combinations					
Incremental Digital Encoder	SIN COS Encoder	Resolver	Encoder 0 (J5)	Encoder 1 (J4)	Encoder 2 (J11)	Encoder 3 (J11)	Resolver 0 (J11)	Resolver 1 (J11)
2 (1 per axis)	2	0	Incremental	Incremental	Not used		Not used	
			Incremental	SIN-COS				
			SIN-COS	Incremental				
			SIN-COS	SIN-COS				
2 (1 per axis)	2	2	Any	Any	Not used		Not used	
4 (2 per axis)	0	0	Incremental	Incremental	Incremental	Incremental	Not used	
4 (2 per axis)	0	1	Incremental	Incremental	Incremental	Incremental	Not used	
			Incremental	Absolute	Incremental	Incremental		
			Absolute	Incremental	Incremental	Incremental		

Ordered			Possible combinations					
Incremental Digital Encoder	SIN COS Encoder	Resolver	Encoder 0 (J5)	Encoder 1 (J4)	Encoder 2 (J11)	Encoder 3 (J11)	Resolver 0 (J11)	Resolver 1 (J11)
4 (2 per axis)	0	2	Incremental	Incremental	Incremental	Incremental	Not used	
			Incremental	Absolute	Incremental	Incremental		
			Absolute	Incremental	Incremental	Incremental		
			Absolute	Absolute	Incremental	Incremental		
4 (2 per axis)	1	0	Incremental	Incremental	Incremental	Incremental	Not used	
			Incremental	SIN-COS	Incremental	Incremental		
			SIN-COS	Incremental	Incremental	Incremental		

Ordered			Possible combinations					
Incremental Digital Encoder	SIN COS Encoder	Resolver	Encoder 0 (J5)	Encoder 1 (J4)	Encoder 2 (J11)	Encoder 3 (J11)	Resolver 0 (J11)	Resolver 1 (J11)
4 (2 per axis)	1	1	Incremental	Incremental	Incremental	Incremental	Not used	
			Incremental	Absolute	Incremental	Incremental		
			Absolute	Incremental	Incremental	Incremental		
			Incremental	SIN-COS	Incremental	Incremental		
			SIN-COS	Incremental	Incremental	Incremental		
			SIN-COS	Absolute	Incremental	Incremental		
			Absolute	SIN-COS	Incremental	Incremental		
4 (2 per axis)	2	0	Incremental	Incremental	Incremental	Incremental	Not used	
			Incremental	SIN-COS	Incremental	Incremental		
			SIN-COS	Incremental	Incremental	Incremental		
			SIN-COS	SIN-COS	Incremental	Incremental		
4 (2 per axis)	2	2	Any	Any	Incremental	Incremental	Not used	

4.7.3.2.1 External encoder supply connection

The UDMPM includes a built-in 5V/250mA encoder supply. If more current is needed or if an encoder (such as a Hiperface encoder) requires a different supply voltage level, an external supply can be applied to connector J6 (pins 5V_ENC_EXT and 5V_ENC_EXT_RTN). [Figure 5-17](#) shows the external supply's connection to the UDMPM.

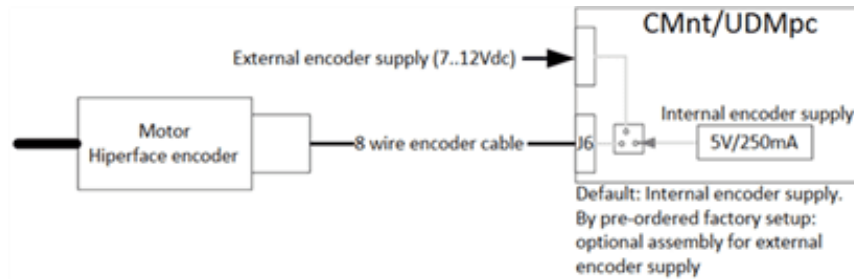


Figure 5-17. External power connection




Using an external encoder supply requires an internal hardware setup. This option must be pre-ordered.

4.8 Motors


4.8.1 J8, J9 motor connectors

Label: J8- MOTOR1, J9 –MOTOR0

Connector	
Manufacturer	Phoenix
Type	MC 1,5/ 6-GF-5,08
Version	6 pin, pitch 5.08 mm
P/N	NA



Mating Connector	
Manufacturer	Phoenix
Type	MC-1.5/6 STF 5,08
Version	6 pin, pitch 5.08

Mating Connector	
P/N	NA
	


 The dollar sign (\$) in the table refers to the axis designations which can be 0 or 1 depending on the connector.

Table 5-15. J8, J9 connector pinout

Pin	Signal	Description
1	R_	Motor R phase
2	S_	Motor S phase
3	T_	Motor T phase
4	EGND	EGND, protected earth.
5	BRK_+	Mechanical brake non-inverted output
6	BRK_-	Mechanical brake inverted output

4.8.2 Connection instructions

A three-phase motor connection is depicted in [Figure 5-18](#). An optional motor filter is shown in series between the drive and the motor. Use a shielded cable, terminated in the EGND pin which is internally connected to the chassis (PE). If needed, the shield/GND may be connected to the motor’s chassis to provide a seamless common ground reference.

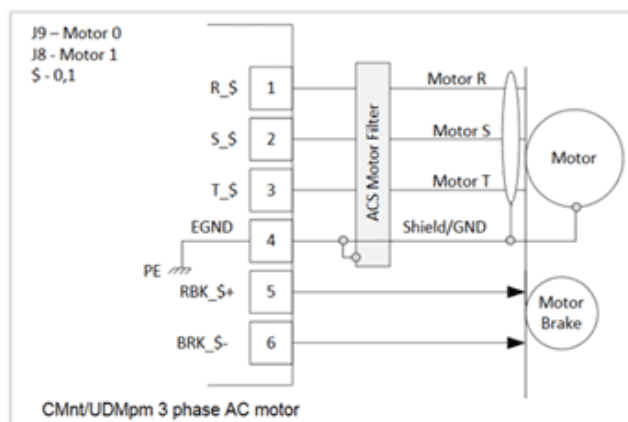


Figure 5-18. Three-phase motor connection



For DC brush motor connections do not connect phase T (Figure 5-19).

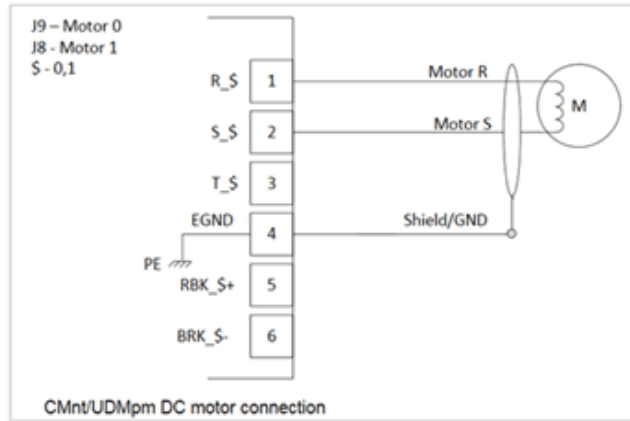


Figure 5-19. DC brush motor connection



For 2-phase step motors connect the motor phases between S-R and between T-R as shown in Figure 5-20.

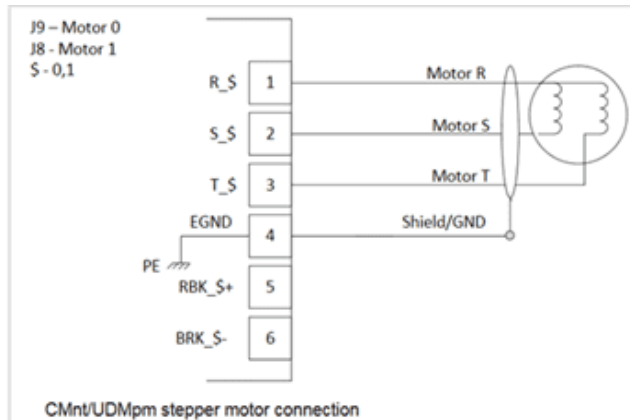


Figure 5-20. Two-phase motor connection

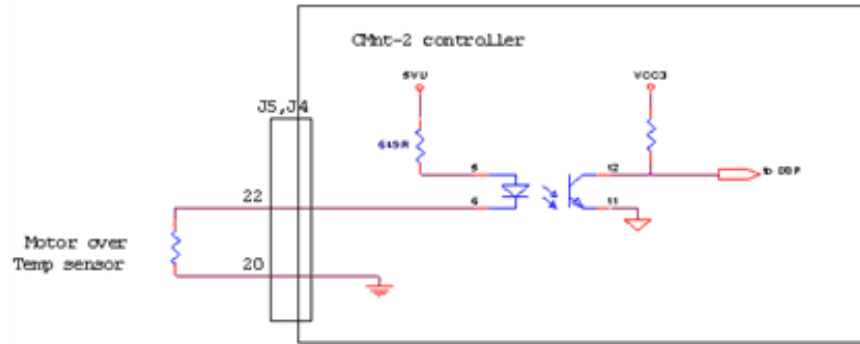


Figure 5-21. Motor over temperature connection

4.8.3 Motor filter

For dv/dt noise reduction it is recommended connecting the ACS Motor Filter (shown in [Figure 5-22](#)) in series between the drive and the motor. The motor filter is designed for 20/40A (RMS Continuous/Peak) current, 440/620Vac (RMS/Peak) voltage. For further details refer to the *MC4U Control Module Hardware Guide*.



Figure 5-22. Motor filter

4.8.4 Mechanical motor braking

Two 24V/1A mechanical brake control outputs are available, one output per axis. These outputs are powered by the 24V logic supply. The outputs are opto-isolated, and protected against shorts.

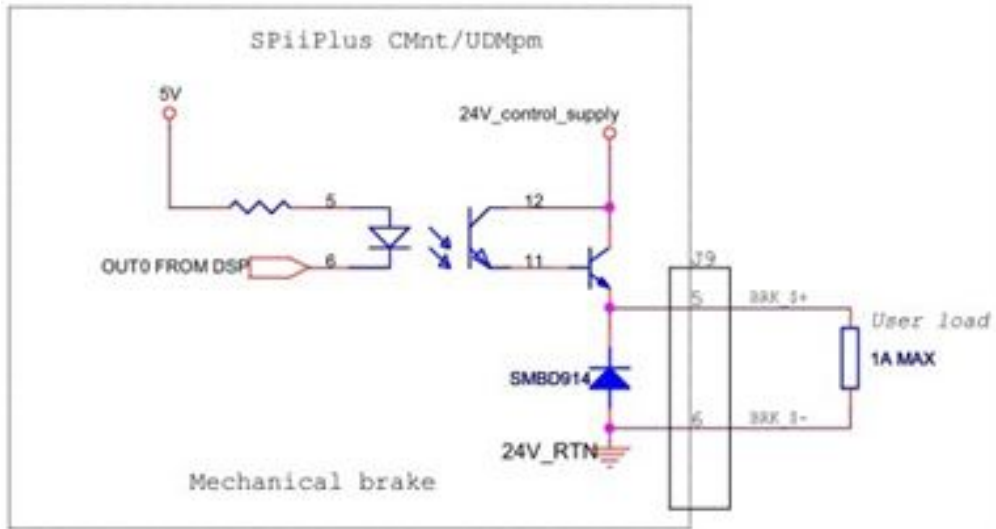







Figure 5-23. Mechanical brake

5. Specifications

Feature	Specifications
Drives	<ul style="list-style-type: none"> > Type: digital current control with field-oriented control and space vector modulation > Current ripple frequency: 40 kHz > Current loop sampling rate: 20 kHz > Programmable Current loop bandwidth up to 5 kHz > Commutation type: sinusoidal. Initiation with and without hall sensors. > Switching method: advanced unipolar PWM. > Protection: <ul style="list-style-type: none"> > Over voltage > Phase-to-phase short circuit > Short to ground > Over- current > Over-temperature
Supply	<p>The module is fed by two power sources:</p> <ul style="list-style-type: none"> > Motor AC supply > 24Vdc control supply
Motor drive supply	<ul style="list-style-type: none"> > Range: 85-265Vac or 120-370Vdc. > Inrush current: 3.75Arms for first 20ms following power-up <div style="border: 1px solid black; border-radius: 10px; padding: 10px; margin-top: 10px;">  <p>Current rating to be calculated based on actual load.</p> </div>
Control supply	<ul style="list-style-type: none"> > Range: 24Vdc \pm 10% > Maximum input current / power: 4A / 100W <div style="border: 1px solid black; border-radius: 10px; padding: 10px; margin-top: 10px;">  <p>The module consumes 2A (50W) during regular operation (without motor brakes) An additional 2A are needed when the external motor brake feature is used</p> </div>
Motor types	<ul style="list-style-type: none"> > Two- and three-phase permanent magnet synchronous (DC brushless/AC servo) > DC brush > Voice coil > Two- and three-phase stepper (micro-stepping open or closed loop)

Feature	Specifications
Motor brakes	Two, 1 per axis. 24V, 1A, opto-isolated. Powered by external 24Vdc Control Supply.
Feedback	<p>Standard:</p> <ul style="list-style-type: none"> > Incremental digital encoders (AqB) > Hall inputs <p>Optional:</p> <ul style="list-style-type: none"> > Analog Sin-Cos > Absolute encoders <div style="border: 1px solid black; border-radius: 10px; padding: 10px; margin-top: 10px;">  5V feedback supply with a total 250mA current available for feedback devices. </div>
Incremental digital AqB	<ul style="list-style-type: none"> > Four, two per axis > A&B, I; Clk/Dir, > Type: Differential RS-422 > Max. Rate: 50 million encoder counts/sec. > Protection: Encoder error, not connected
Sin-Cos analog encoder (optional)	<ul style="list-style-type: none"> > Two, one per axis > Type: 1Vptp, differential > Programmable multiplication factor: x4 to -x4096 > Maximum frequency: 250kHz > Automatic compensation of Offset, Phase, and Amplitude > Maximum acceleration: 10^8 sine periods/sec² > ADC resolution: 12 bit > Protection: Encoder error, not connected
Sin-Cos digital output	The Sin-Cos inputs are available as digital outputs
Absolute encoders (optional)	<p>EnDat 2.1(Digital)/ 2.2, Smart-ABS, Panasonic, BiSS-A/B/C, SSI, Hiperface</p> <div style="border: 1px solid black; border-radius: 10px; padding: 10px; margin-top: 10px;">  Consult ACS customer support for availability. </div>
Hall	<ul style="list-style-type: none"> > Two sets of three per axis > Type: single-ended, 5V, source, opto-isolated > Input current: <7mA

Feature	Specifications
Resolver (optional)	<ul style="list-style-type: none"> > Two sensor inputs are available, 1 per axis. > 12bit resolution (4,096 counts/rev). > Excitation provided by a differential 10Vp-p $\pm 5\%$/20KHz 35mA signal (RSV_EXT) > Inputs are 2 Sin-Cos differential 3.15V$\pm 25\%$ signals.
Limit switch inputs	<ul style="list-style-type: none"> > Right Limit and Left Limit per axis > Interfaces: Configured by ordering option: 5 or 24V (default), Source (default) or Sink, single-ended, opto-isolated. > Input current: 4-14mA. > Input impedance: 5.6kΩ
Registration MARK inputs	<ul style="list-style-type: none"> > Four, 24V opto-isolated > Two are RS-422 with dedicated inputs > Two share the general purpose inputs 6 and 7
Digital inputs	<ul style="list-style-type: none"> > Eight single ended, opto-isolated > Interfaces: Configured by ordering option: 5 or 24V (default), Source (default) or Sink > Input current: 4-14mA
Digital outputs	<ul style="list-style-type: none"> > Eight, Single ended, opto-isolated > 0.5A per output, Up to 3A per 8 outputs > 24V ($\pm 20\%$) is externally user-provided, common to all signals. > Two GP outputs can be programmed to be used as the PEG Pulse outputs. <div style="border: 1px solid black; border-radius: 10px; padding: 10px; margin-top: 10px;">  <p>For further information, see <i>PEG and MARK Operations Application Notes</i>.</p> </div>
PEG (Position event generator)	<ul style="list-style-type: none"> > Signals: Two PEG_Pulse and two PEG_State > Differential, RS422 > Pulse width (RS-422): 26nSec to 1.75mSec. At maximal rate of 10MHz. > Pulse width (GP outputs): 0.75mSec to 1.75mSec. At maximal rate of 1kHz.


Feature	Specifications
HSSI	<ul style="list-style-type: none"> > One channel, RS-422 > For communication with ACS peripherals (proprietary protocol) such as HSSI-ED2 and HSSI-IO-16. > Up to 10m length. <div style="border: 1px solid black; padding: 5px; margin-top: 10px;">  Check support of HSSI modules with ACS. </div>
Analog inputs	<ul style="list-style-type: none"> > Four, two per axis, $\pm 10V$, differential, 12bit resolution > Maximum input frequency: 10kHz > Offset: 100mV > Maximum sampling rate 250kHz
Analog outputs	<ul style="list-style-type: none"> > Two, one per axis, $\pm 10V \pm 10\%$, differential, 10 bit resolution, differential > Offset: <50mV > Maximum ripple: <50mV > Minimal input load: 10KΩ load
Communication	<ul style="list-style-type: none"> > EtherCAT: Two, In, Out

Table 6-1. Drive power specifications

Part Number X – number of axes YY – special options	-X-0052- YY	-X-005- YY	-X-007-YY
Number of axes	1 or 2		
Network update rate	<ul style="list-style-type: none"> > 2, 4, 6, 8 axes - 2kHz > 16 or 32 axes - 1kHz 		
Input voltage range [Vac]	85 to 265		
Input voltage range [Vdc]	120 to 375		
Phase Current Cont./Peak, sine amplitude [A]	2.5 / 5	5 / 10	7.5 / 15
Phase Current Cont./Peak, RMS [A]	1.8 / 3.6	3.6 / 7.1	5.4 / 10.8
Peak current time [sec]	1		
Max. output voltage	(Vdc) x 1.41 x 88%		

Part Number X – number of axes YY – special options	-X-0052- YY	-X-005- YY	-X-007-YY
Max. Input Cont./Peak power per axis @ at 230Vac [kVA]	0.9 /1.8	1.6	2.5
Max. output power (Cont./Peak) per axis @ 230Vac [kW]	0.55 / 1.1	1.1/2.2	1.6/3.2
Minimum load Inductance, at maximum motor voltage [mH]	1		
Max. Heat dissipation per axis @ 230Vac [W]	25	50	75

The maximal continuous/peak input currents as a function of maximal continuous/peak output power (at a given AC voltage input) are presented in [Table 6-2](#). Efficiency of 68% at continuous and 66% at peak current performance.

Table 6-2. Input current vs. output power

Cont. /peak current	Cont. / peak power	AC voltage
11.7/11.7A	1007/1007W	@85Vac
12.9/17.4A	1485/2005W	@115Vac
12.9/17.4A	3676/ 7350W	@230Vac
16.3/34A	4304/ 8977W	@265Vac

The power bridge output voltage [V_{rms}] and maximal output power [Watt] per current rating and per axis, as function of single phase AC input voltage, is given below in [Table 6-3](#).

Table 6-3. Power output vs current

Cont / Peak	No. axes	85Vac	115Vac	230Vac	
5/10A	1	62V / 380W	86V / 529W	184V / 1128W	214V / 1307W
		52V / 637W	76V / 936W	174V / 2134W	204V / 2493W
	2	52V / 637W	76V / 936	174V / 2134W	204V / 2493W
		52V / 637W	76V / 936W	154V / 3778W	184V / 4496W

Cont / Peak	No. axes	85Vac	115Vac	230Vac	
7.5/15A	1	57V / 524W	81V / 748W	179V / 1646W	209V / 1915W
		42V / 772W	66V / 1221W	164V / 3017W	194V / 3555W
	2	51V / 656W	75V / 970W	172V / 2366	201V / 2770W
		42V / 772W	66V / 1221W	134V / 4932W	164V / 6010W

5.1 STO

Table 6-4. STO Specifications

Item	Description	Remarks
Designation	STO1±, STO2±	
Quantity	2 inputs. One input shuts off the upper part of the motor bridge and second input shuts off the lower part of the bridge.	Both drives shut off simultaneously. All drives are disabled within 200mS.
Interface	24V, two terminal for each input	
Input current (per input pin)	<50mA.	
Operation	No current -> drive off.	

5.2 Safety and faults

Limit switches	Right Limit and Left Limit per axis. Opto-isolated, single-ended 24V± 20%, referenced to a common return signal. Activation at above 14mA.
Emergency Stop	One opto-isolated, 24V, 2-terminal signal. Activation above 14mA. Return line is common to Over-Temperature indication and Hall signals.
STO	2 signals per product, 24V and GND lines each, activated at 27mA min. Provides a standard, SIL-3 level delayed PWM drive discontinuation when activated. STO1 deactivates lower bridge and STO2 deactivates upper bridge of both drives

Mechanical Brake	One output per axis. 24V \pm 20%, opto-isolated current driving signals, 1A each. Protection against short circuit is provided. Power is provided internally from the 24V logic supply without additional protection.
Over temperature	Single-ended, opto-isolated, reference to 5U_RTN. Measured on the product heat sink, activated at 85-90 °C.
Over current	A per axis software indication when within the range below or higher: 5A model: 15A \pm 5% (14 – 16A) 7.5A model: 22A \pm 5% (21 – 23A)
Bus over voltage	A software indication at 442...467V
Bus under voltage	A software indication at 76...84V
Power Supply Not Ready	A software indication, active during the initial phase following power-up (soft start) for 4.5 – 5.5s
Motor short circuit	Phase-to-phase or phase-to-ground short detection by software. 5A model: 20A \pm 5% (19 – 21A) 7.5A model: 30A \pm 5% (28 – 32A)

5.2.1 Fault indications

The UDMPM supports hardware- and software-based fault indications for:

- > Bus Over Voltage (442...467V)
- > Bus Under Voltage (76...84V)
- > AC Power Down
- > Power Supply Not Ready (4.5-5.5 sec during transitional powering up, 'soft start')
- > Over Temperature: Measured on the heat sink and activated at 85-90°C
- > Motor Phase faults: Phase-to-Phase Short and Short-to-Ground
- > Over Current: Measured per axis and reported to the user's application by software.
- > Motor Over Temperature

5.2.2 Emergency stop

The Emergency Stop input is a two line, opto-isolated signal, fed from a 24V supply and activated at above 14mA as depicted in [Figure 5-6](#).

5.2.3 Motor over temperature fault

The UDMPM provides one output signal per axis for connecting Motor Over Temperature fault sensors. The signal is single-ended, opto-isolated and referenced to a common ground for all faults as shown in [Figure 5-21](#).

Indication is ON when the motor PTC is > 10k Ω , and is OFF when motor PTC impedance is < 1k Ω .

5.2.4 Regeneration

In order to absorb excess mechanical reverse energy translated into electrical energy during deceleration, and to avoid a voltage rise beyond the drive's overvoltage protection level, an external active regeneration device should be used. A connectivity schematic is depicted in [Figure 6-1](#). The rectified voltage bus (VBUS) is provided in the J10 connector. Use an external Regeneration unit (such as, Copley's Model 125 & 145), selected based on peak and continuous current, power, energy and bus voltages.

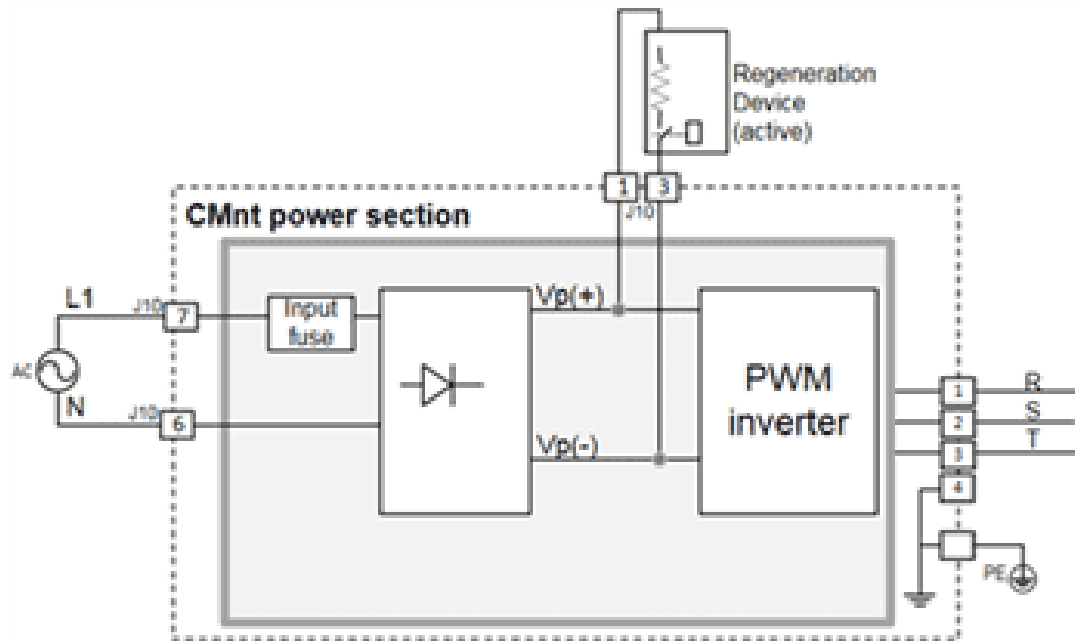


Figure 6-1. Regeneration connection

5.3 Communication

All communication (configuration, setup, control, and monitoring) with the UDMPM is performed from the host application through the EtherCAT network master. No direct communication is required or possible.

5.3.1 Network (EtherCAT) communication

Being an EtherCAT network element ("slave"), the UDMPM has EtherCAT IN and EtherCAT OUT ports, for connection with the product's neighboring network devices. The UDMPM can be positioned anywhere in the network, including being the first device connected to the master or being the last device in the network. Refer to [Figure 6-2](#) for a schematic connectivity diagram depicting two configurations. In the upper configuration, the UDMPM is connected to an ACS master which in turn is connected to a host computer. In the lower configuration, the UDMPM is connected to a SPiiPlusSC, which combines an EtherCAT master functionality, host application, and ACS motion controller.

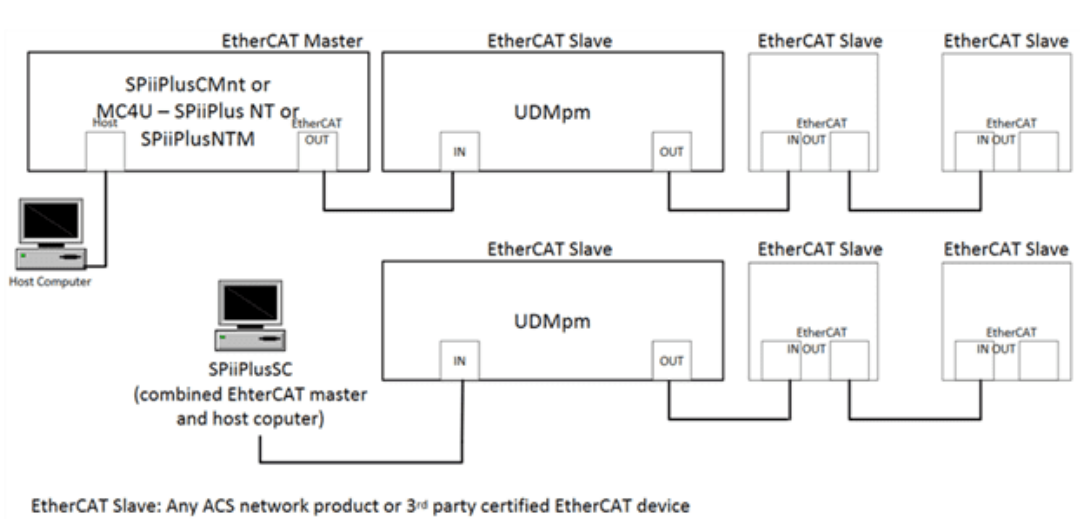


Figure 6-2. EtherCAT network connections

When employing the UDMPM in an EtherCAT network, use the SPiiPlus MMI Application Studio **EtherCAT Configurator** tool to set it up (see the *SPiiPlus MMI Application Studio User Guide* for details).

5.4 Dimensions

The dimensions of the UDMPM are shown in Figure 6-3.

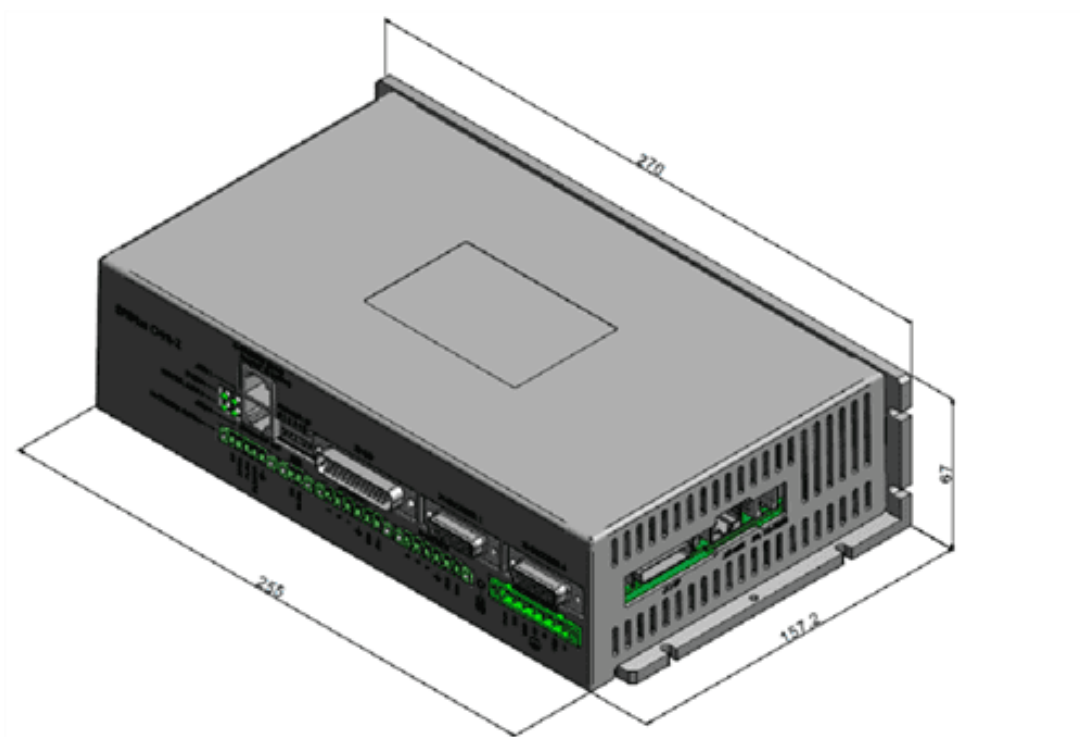


Figure 6-3. UDMPM dimensions

5.5 Weight

> 2.0kg

5.6 Compliance with standards

The UDMPM Dual Axis Control Module meets the requirements of the following standards:

EN 61326-1:2006	Industrial locations equipment, class A standard, under article 6(2) of EMC Directive 2004/108/EC (ACSEMC_EN.22513C)
IEC 61010-1:2001	Safety conformance, 2nd edition.
SEMI F42-0999:1999 SEMI F47-0200:2000	Voltage sag immunity
IEC 60068-2-6 Class 4M4 IEC 60068-2-29 Class 4M4 IEC 60068-2-56 Class 4K3	Sine vibration during operation (5-150 Hz, 3 axes, 10 m/s ²) 600 shocks, 150m/s ² , 6ms 93%, 30C

5.6.1 Environment

Operating	0 to +50°C
Storage	-25 to +70°C
Humidity	5% to 90% non-condensing

5.6.1.1 Thermal considerations

Operate the UDMPM with forced air being applied.

The standard unit generates maximal power with 115CFM air flow in ambient temperatures of up to 47°C (3.5Arms each axis in 5A model) and 36°C (5.3Arms each axis in 7A model).



An additional heat sink is not an option.

Figure 6-4 displays the losses (Watts) for 5A and 7.5A (peak sine Amps) drives as a function of rms current (Amps).

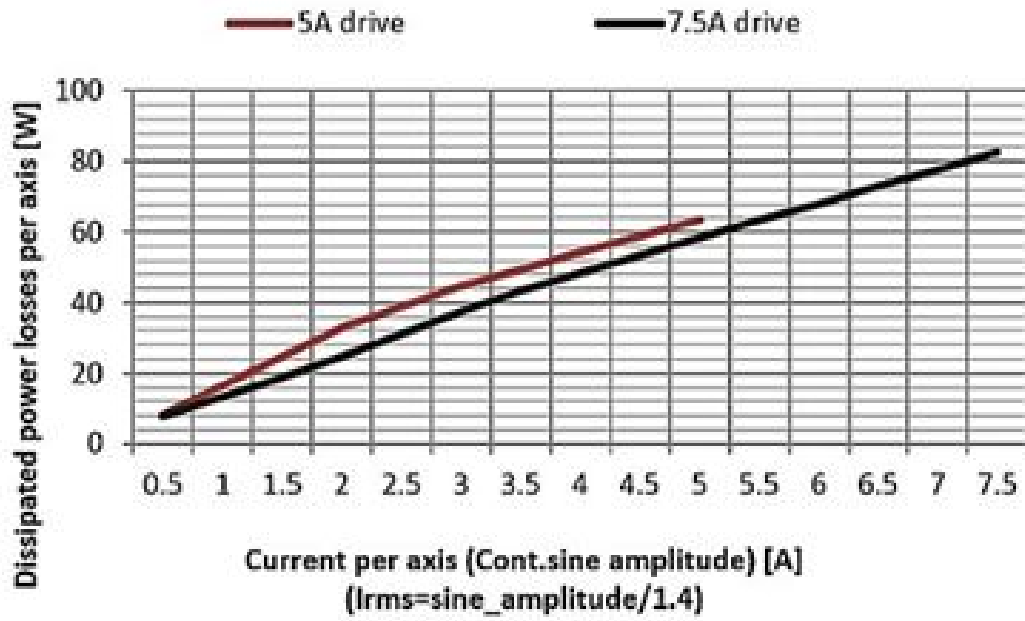


Figure 6-4. Dissipated power vs current

Figure 6-5 displays the maximal allowable ambient temperature (°C) at which the UDMPM can operate with UDMPMforced air flow (CFM) of various values.

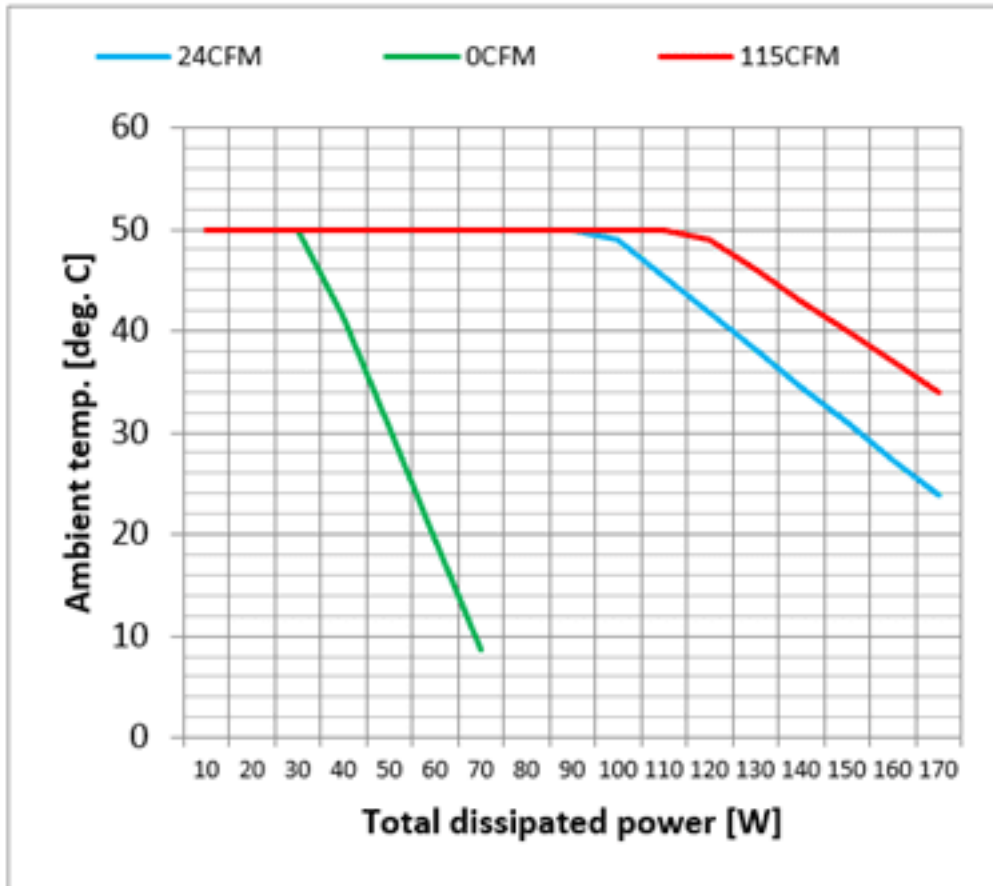


Figure 6-5. Dissipated power vs temperature

For example, to determine the overall power losses of both axes as a function of their rms current: from the chart in Figure 6-4 if the two 7.5A drives operate at 3.2Arms, a total of $2 \times 50 = 100\text{W}$ has to be dissipated. From Figure 6-5 with a minimal forced air flow of 24CFM the UDMPM can be operated at its maximal ambient temperature rating of 50°C.



Figure 6-5 also displays the maximal operational temperature as function of dissipated power when no ventilation is applied.

Smarter



Motion

5 HaTnufa St.
Yokne'am Illit 2066717
Israel
Tel: (+972) (4) 654 6440 Fax: (+972) (4) 654 6443

Contact us: sales@acsmotioncontrol.com | www.acsmotioncontrol.com

